Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Version 1.0

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corp.

MMX, Pentium, Pentium-II, Pentium-III, Celeron are registered trademarks of Intel Corporation.

Other product names used in this manual are the properties of their respective owners and are acknowledged.

Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment onto an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Shielded interconnect cables and a shielded AC power cable must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This device is in conformity with the following EC/EMC directives:

- ❑ **EN 55022** Limits and methods of mesurement of radio disturbance characteristics of information technology equipment
- ❑ **EN 61000-3-2** Disturbances in supply systems caused
- ❑ **EN 61000-3-3** Disturbances in supply systems caused by household appliances and similar electrical equipment " Voltage fluctuations"
- ❑ **EN 55024** Information technology equipment-Immunity characteristics-Limits and methods of measurement
- ❑ **EN 60950** Safety for information technology equipment including electrical business equipment
- ❑ **CE marking** CE

Canadian Department of Communications

This class B digital apparatus meets all requirements of the Canadian Interference-causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Réglement sur le matériel brouilieur du Canada.

About the Manual

The manual consists of the following:

Chapter 1 **Introducing the Motherboard**	Describes features of the motherboard.	page 1
Chapter 2 **Installing the Motherboard**	Describes installation of motherboard components.	page 7
Chapter 3 **Using BIOS**	Provides information on using the BIOS Setup Utility.	page 27
Chapter 4 **Using the Motherboard Software**	Describes the motherboard software.	page 55
Chapter 5 **Intel® Matrix Storage Manager RAID Configurations**	Describes Intel® Matrix Storage Manager RAID Configurations.	page 59
Chapter 6 **Trouble Shooting**	Provides basic trouble shooting tips.	page 65

TABLE OF CONTENTS

Preface i

Chapter 1 1
Introducing the Motherboard 1
Introduction....1
Pakage Contents....1
Specifications....2
Motherboard Components....4
I/O Ports....6

Chapter 2 7
Installing the Motherboard 7
Safety Precautions....7
Installing the Motherboard in a Chassis....7
Checking Jumper Settings....8
Installing Hardware....9
Installing the Processor....9
Installing the CPU Cooler....11
Installing Memory Modules....12
Installing Add-on Cards....13
Connecting Optional Devices....15
Installing a SATA Hard Drive....22
Connecting Case Components....23
Front Panel Header....25

Chapter 3 27
Using BIOS 27
About the Setup Utility....27
The Standard Configuration....27
Entering the Setup Utility....27
Resetting the Default CMOS Values....28
Using BIOS....28
BIOS Navigation Keys....29
Main Menu....30
Advanced Menu....31
Chipset Menu....44
M.I.B.III(MB Intelligent Bios III) Menu....47
Boot Menu....51
Security Menu....52
Save & Exit Menu....53
Updating the BIOS....54

Chapter 4 **55**
Using the Motherboard Software **55**
Auto-installing under Windows XP/Vista/7.....55
Running Setup.....55
Manual Installation.....57
ECS Utility Software (Intelligent EZ Utility).....57

Chapter 5 **59**
Intel® Matrix Storage Manager RAID Configuration ***59***
Before creating a RAID set.....59
Entering Intel® Matrix Storage Manager RAID BIOS utility.....60
Creating a RAID set.....61
Deleting a RAID set.....63
Reseting disks to Non-RAID.....64
Exiting Setup.....64

Chapter 6 **65**
Trouble Shooting **65**
Start up problems during assembly.....65
Start up problems after prolong use.....66
Maintenance and care tips.....66
Basic Troubleshooting Flowchart.....67

Chapter 1
Introducing the Motherboard

Introduction

Thank you for choosing the **H77H2-M3** motherboard. This motherboard is a high performance, enhanced function motherboard designed to support the LGA1155 socket for latest Intel® Core™ i3/i5/i7 processors.

This motherboard is based on Intel® H77 Express Chipset for best desktop platform solution. It supports up to 16 GB of system memory with dual channel DDR3 1600/1333/1066 MHz. One PCI Express x16 slot, intended for Graphics Interface, is supported. In addition, one PCI Express x1 slot and two PCI slots are for extending usage.

It integrates USB 2.0 and USB 3.0 interface, supporting up to ten USB 2.0 ports (four USB 2.0 ports and three USB 2.0 headers support additional six USB 2.0 ports) and four USB 3.0 ports (two USB 3.0 ports at the rear panel and one USB 3.0 header supports additional two USB 3.0 ports). The gray USB 2.0 header provides EZ charger technology, please refer to Front Panel USB headers of chapter 2 for more details.

The motherboard is equipped with advanced full set of I/O ports in the rear panel, including PS/2 mouse and PS/2 keyboard connectors, one DVI port, one VGA port, one HDMI port, one RJ45 LAN connector, four USB 2.0 ports, two USB 3.0 ports and audio jacks 6-ch for microphone, line-in and line-out.

In addition, this motherboard supports two SATA 6Gb/s and four SATA 3Gb/s connectors for expansion.

Package Contents

Your motherboard package ships with the following items:

- ❑ H77H2-M3 Motherboard
- ❑ Quick Installation Guide
- ❑ User Manual
- ❑ DVD
- ❑ I/O Shield
- ❑ 2 SATA 3Gb/s Cables

The package contents above are for reference only, please take the actual package items as standard.

Specifications

CPU	• LGA1155 socket for latest Intel® Core™ i3/i5/i7 processors • Supports Intel® Turbo Boost Technology 2.0 • Intel® Quick Sync Video Technology • Supports "Hyper-Threading" technology *Note: Please go to ECS website for the latest CPU support list.*
Chipset	• Intel® H77 Chipset
Memory	• Dual-channel DDR3 memory architecture • 2 x 240-pin DDR3 DIMM sockets support up to 16 GB • Supports DDR3 1600/1333/1066 MHz DDR3 SDRAM *Note: Please go to ECS website for the latest Memory support list.*
Expansion Slots	• 1 x PCI Express x16 slot (The PCI Express x16 slot conforms to PCI Express 3.0 Standard) • 1 x PCI Express x1 Gen2 slot • 2 x PCI slots
Storage	• Supported by Intel® H77 Express Chipset - 4 x Serial ATA 3Gb/s devices - 2 x Serial ATA 6Gb/s devices - RAID 0, RAID 1, RAID 5, RAID 10 configuration
Audio	• Realtek ALC662 - 2/4/5.1 Channel High Definiton Audio Codec - Compliant with HD audio specification
LAN	• Realtek 8111E - 10/100/1000 Fast Ethernet Controller - Wake-on-LAN and remote wake-up support
Rear Panel I/O	• 1 x PS/2 keyboard and PS/2 mouse connectors • 1 x VGA port • 1 x DVI port • 1 x HDMI port • 4 x USB 2.0 ports • 1 x RJ45 LAN connector • 2 x USB 3.0 ports • Audio jacks 6-ch for microphone, line-in and line-out
Internal I/O Connectors & Headers	• 1 x 24-pin ATX Power Supply connector • 1 x 4-pin 12V Power connector • 1 x 4-pin CPU_FAN connector (smart fan) • 1 x 4-pin SYS_FAN connector • 3 x USB 2.0 headers support additional six USB 2.0 ports (F_USB1 supports EZ charger) • 1 x USB 3.0 header supports additional two USB 3.0 ports • 4 x Serial SATA 3Gb/s connectors • 2 x Serial SATA 6Gb/s connectors • 1 x COM header • 1 x Case open header • 1 x SPDIF out header • 1 x Front Panel audio header

	•	1 x Front Panel switch/LED header • 1 x Speaker header • 1 x TPM header • 1 x ME_UNLOCK header • 1 x Parallel port header(LPT) • 1 x CLR_CMOS header
System BIOS	•	AMI BIOS with 64Mb SPI Flash ROM - Supports ECS MIB III Utility - Supports Plug and Play - Supports Hardware Monitor - Supports ACPI 3.0 version & DMI - Supports Audio, LAN, can be disabled in BIOS - Supports ECS GUI UEFI BIOS - Supports Dual Display - Supports Pgup clear CMOS Hotkey (Has PS2 KB Model only)
Form Factor	•	Micro-ATX Size, 244mm x 220mm

Motherboard Components

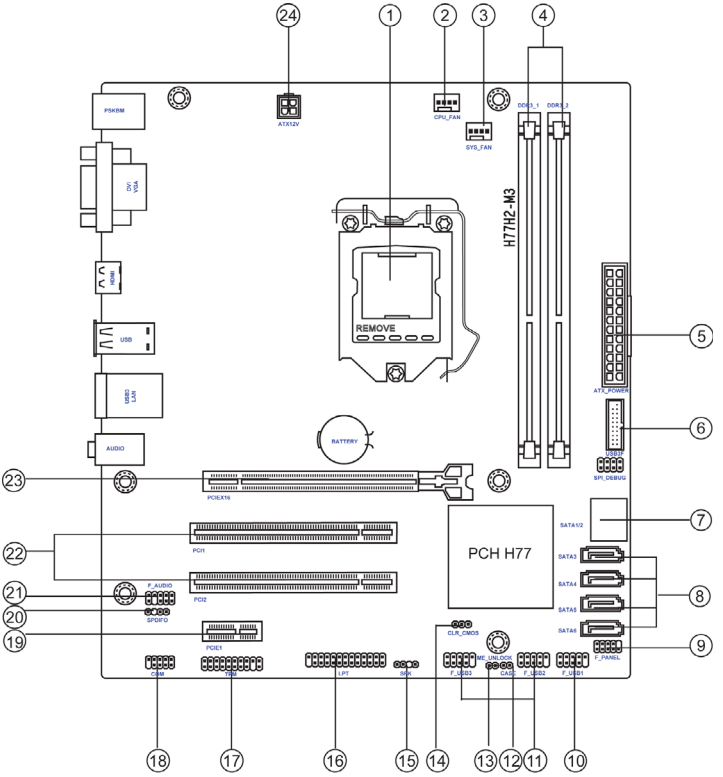

Table of Motherboard Components

LABEL	COMPONENTS
1. CPU Socket	LGA1155 socket
2. CPU_FAN	4-pin CPU cooling fan connector
3. SYS_FAN	4-pin system cooling fan connector
4. DDR3_1~2	240-pin DDR3 Module slots
5. ATX_POWER	Standard 24-pin ATX power connector
6. USB3F	Front panel USB 3.0 header
7. SATA 6G 1/ 2	Serial ATA 6.0 Gb/s connectors
8. SATA3~6	Serial ATA 3.0 Gb/s connectors
9. F_PANEL	Front panel switch/LED header
10. F_USB1	Front panel USB 2.0 header (F_USB1 supports EZ Charger)
11. F_USB2~3	Front panel USB 2.0 headers
12. CASE	CASE open header
13. ME_UNLOCK	ME unlock header-for factory use only
14. CLR_CMOS	Clear CMOS jumper
15. SPK	Speaker header
16. LPT	Printer Header
17. TPM	Trusted Platform Module header
18. COM	Onboard serial port header
19. PCIE1	PCI Express x1 slot
20. SPDIFO	SPDIF out header
21. F_AUDIO	Front panel audio header
22. PCI1~2	32-bit add-on card slots
23. PCIEX16	PCI Express slot for graphics interface
24. ATX12V	4-pin +12V power connector

I/O Ports

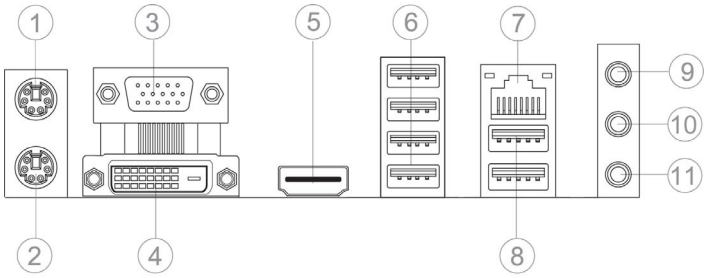

1. PS/2 Mouse(green)
Use the upper PS/2 port to connect a PS/2 mouse.

2. PS/2 Keyboard(purple)
Use the lower PS/2 port to connect a PS/2 keyboard.

3. VGA Port
Connect your monitor to the VGA port.

4. DVI Port
You can connect the display device to the DVI port.

5. HDMI Port
You can connect the display device to the HDMI port.

6. USB 2.0 Ports
Use the USB 2.0 ports to connect USB 2.0 devices.

7. LAN Port
Connect an RJ-45 jack to the LAN port to connect your computer to the Network.

LAN LED	Status	Description
Activity LED	OFF	No data
	Orange blinking	Active
Link LED	OFF	No link
	Green	Link

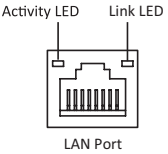

8. USB 3.0 Ports
Use the USB 3.0 ports to connect USB 3.0 devices.

9. Line-in(blue)
It can be connected to an external CD/DVD player, Tape player or other audio devices for audio input.

10. Line-out(lime)
It is used to connect to speakers or headphones.

11. Microphone(pink)
It is used to connect to a microphone.

Chapter 2
Installing the Motherboard

2-1. Safety Precautions

Follow these safety precautions when installing the motherboard:

- Wear a grounding strap attached to a grounded device to avoid damage from static electricity.
- Discharge static electricity by touching the metal case of a safely grounded object before working on the motherboard.
- Leave components in the static-proof bags.
- Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.

2-2. Installing the motherboard in a Chassis

This motherboard carries a Micro ATX form factor of 244 x 220 mm. Choose a chassis that accommodates this from factor. Make sure that the I/O template in the chassis matches the I/O ports installed on the rear edge of the motherboard. Most system chassis have mounting brackets installed in the chassis, which corresponds to the holes in the motherboard. Place the motherboard over the mounting brackets and secure the motherboard onto the mounting brackets with screws.

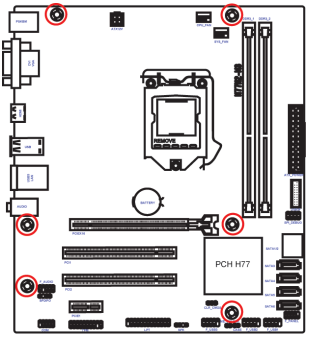

Do not over-tighten the screws as this can stress the motherboard.

2-3. Checking Jumper Settings

The following illustration shows the location of the motherboard jumpers. Pin 1 is labeled.

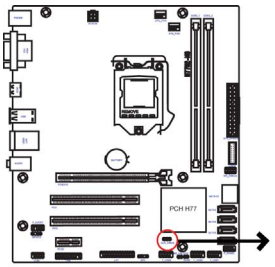

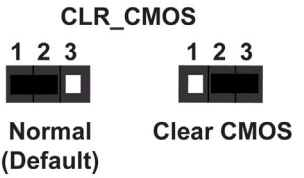

To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to "Load Default Settings" and then "Save and Exit Setup".

2-4. Installing Hardware

2-4-1. Installing the Processor

- This motherboard has an LGA1155 socket.
- When choosing a processor, consider the performance requirements of the system. Performance is based on the processor design, the clock speed and system bus frequency of the processor, and the quantity of internal cache memory and external cache memory.
- You may be able to change the settings in the system Setup Utility. We strongly recommend you do not over-clock processor or other components to run faster than their rated speed.
- The following illustration shows CPU installation components.

A. Press the hook of lever down with your thumb and pull it to the right side to release it from retention tab.

B. Lift the tail of the load lever and rotate the load plate to fully open position.

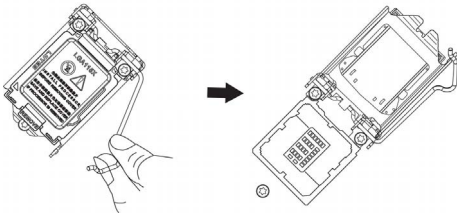

C. Grasp the edge of the package substrate. Make sure pin 1 indicator is on your bottom-left side. Aim at the socket and place the package carefully into the socket by purely vertical motion.

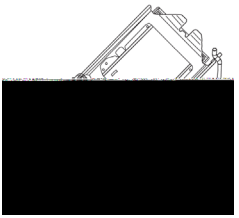

D. Rotate the load plate onto the package IHS (Intergraded Heat Spreader). Engage the load lever while pressing down lightly onto the load plate. Secure the load lever with the hook under retention tab. Then the cover will flick automatically.

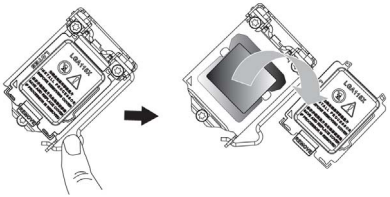

Please save and replace the cover onto the CPU socket if processor is removed.

2-4-2. Installing the CPU Cooler

- Install the cooling fan in a well-lit work area so that you can clearly see the motherboard and processor socket.
- Avoid using cooling fans with sharp edges in case the fan casing and the clips cause serious damage to the motherboard or its components.
- To achieve better airflow rates and heat dissipation, we suggest that you use a high quality fan with 3800 rpm at least. CPU fan and heat sink installation procedures may vary with the type of CPU fan/heatsink supplied. The form and size of fan/heatsink may also vary.
- DO NOT remove the CPU cap from the socket before installing a CPU.
- Return Material Authorization (RMA) requests will be accepted only if the motherboard comes with the cap on the LGA1155 socket.
- The following illustration shows how to install CPU fan.

A. Apply some thermal grease onto the contacted area between the heatsink and the CPU, and make it to be a thin layer.

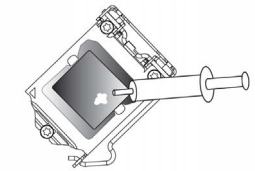

B. Fasten the cooling fan supporting base onto the CPU socket on the motherboard. And make sure the CPU fan is plugged to the CPU fan connector.

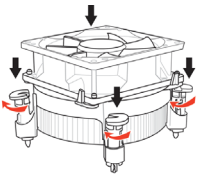

C. Connect the CPU cooler power connector to the CPU_FAN connector.

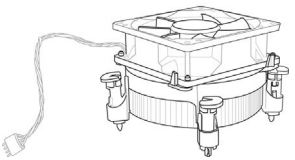

2-4-3. Installing Memory Modules

- This motherboard accommodates two memory modules. It can support two 240-pin DDR3 1600/1333/1066.
- Do not remove any memory module from its antistatic packaging until you are ready to install it on the motherboard. Handle the modules only by their edges. Do not touch the components or metal parts. Always wear a grounding strap when you handle the modules.
- You must install at least one module in any of the two slots. Total memory capacity is 16 GB.
- Refer to the following to install the memory modules.

A. Push the latches on each side of the DIMM slot down.

B. Install the DIMM module into the slot and press it firmly down until it seats correctly. Check that the cutouts on the DIMM module edge connector match the notches in the DIMM slot.

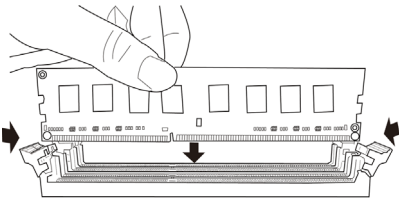

C. The slot latches are levered upwards and latch on to the edges of the DIMM.

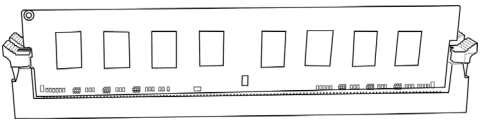

2-4-4. Installing Add-on Cards

The slots on this motherboard are designed to hold expansion cards and connect them to the system bus. Expansion slots are a means of adding or enhancing the motherboard's features and capabilities. With these efficient facilities, you can increase the motherboard's capabilities by adding hardware that performs tasks that are not part of the basic system.

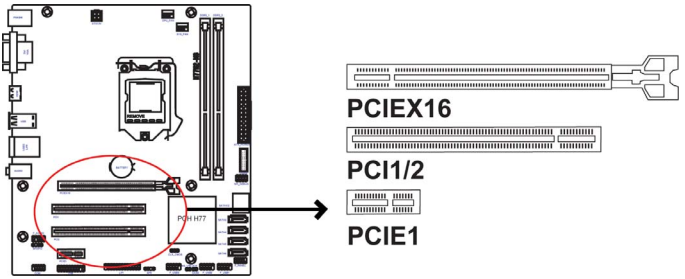

PCIEX16 Slot The PCI Express x16 slot is used to install an external PCI Express graphics card that is fully compliant to the PCI Express Base Specification revision 3.0.

PCI1~2 Slots This motherboard is equipped with two standard PCI slots. PCI stands for Peripheral Component Interconnect and is a bus standard for expansion cards, which for the most part, is a supplement of the older ISA bus standard. The PCI slots on this board are PCI v3.0 compliant.

PCIE1 Slot The PCI Express x1 slot is fully compliant to the PCI Express Base Specification revision 2.0.

Before installing an add-on card, check the documentation for the card carefully. If the card is not Plug and Play, you may have to manually configure the card before installation.

Follow these instructions to install an add-on card:

1 Remove a blanking plate from the system case corresponding to the slot you are going to use.

2 Install the edge connector of the add-on card into the expansion slot. Ensure that the edge connector is correctly seated in the slot.

3 Secure the metal bracket of the card to the system case with a screw.

1. For some add-on cards, for example graphics adapters and network adapters, you have to install drivers and software before you can begin using the add-on card.

2. The onboard PCI interface does not support 64-bit SCSI cards.

Please refer the following illustrations to install the add-on card:

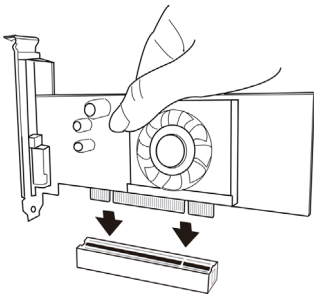

Install the VGA Card in the PCI slot

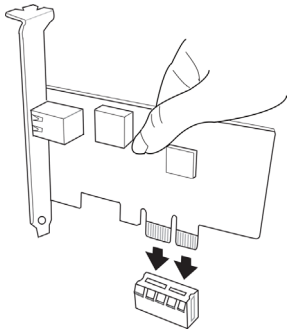

Install the VGA Card in the PCIE X1 slot

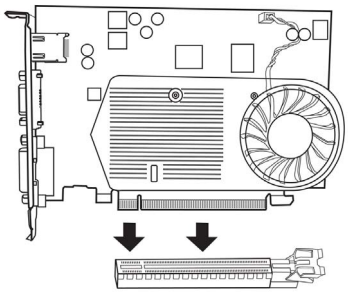

Install the VGA Card in the PCIE X16 slot

2-4-5. Connecting Optional Devices

Refer to the following for information on connecting the motherboard's optional devices:

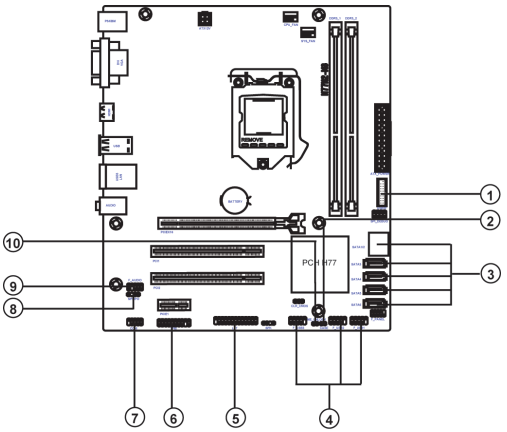

No.	Components	No.	Components
1	USB3F	6	TPM
2	CASE	7	COM
3	SATA1~6	8	SPDIFO
4	F_USB1~3	9	F_AUDIO
5	LPT	10	ME_UNLOCK

1. USB3F: Front Panel USB 3.0 header

This Motherboard implements one USB 3.0 header supporting 2 extra front USB 3.0 ports, which delivers 5Gb/s transfer rate.

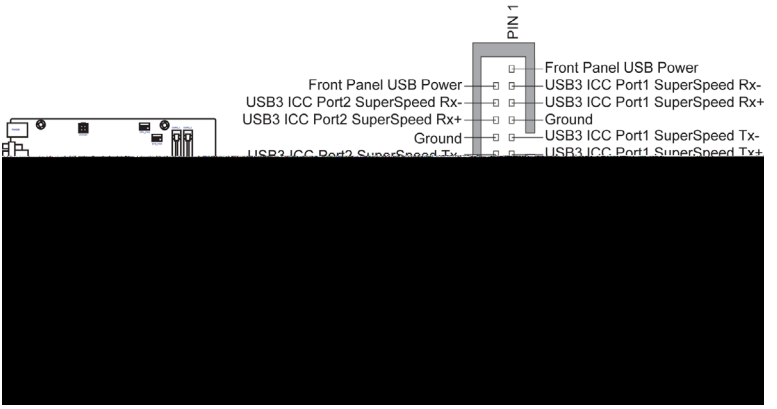

Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.

2. CASE: Chassis Intrusion Detect Header

This detects if the chassis cover has been removed. This function needs a chassis equipped with instrusion detection switch and needs to be enabled in BIOS.

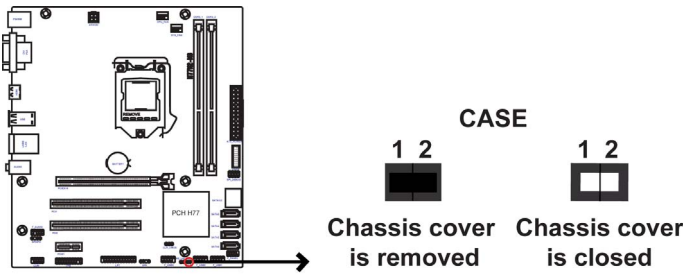

3. SATA1~6: Serial ATA connectors

SATA3~6 connectors are used to support the Serial ATA 3.0Gb/s device, SATA1/2 connectors support the Serial ATA 6.0Gb/s device, simpler disk drive cabling and easier PC assembly. It eliminates limitations of the current Parallel ATA interface. But maintains register compatibility and software compatibility with Parallel ATA.

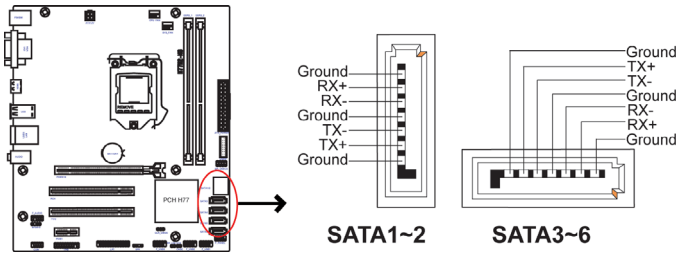

4. F_USB1~3: Front Panel USB 2.0 headers (F_USB1 supports EZ Charger)

The motherboard has three USB 2.0 headers supporting six USB 2.0 ports. Additionally, some computer cases have USB ports at the front of the case. If you have this kind of case, use auxiliary USB connector to connect the front-mounted ports to the motherboard.

Unlike F_USB2~3 in this mainboard, F_USB1 supports EZ Charger technology, provides 3 times current than general USB port in off mode for USB devices. It is useful and excellent, especially for the iPhone, iPad and iPod touch devices that need a large amount of current for faster recharging within less time.

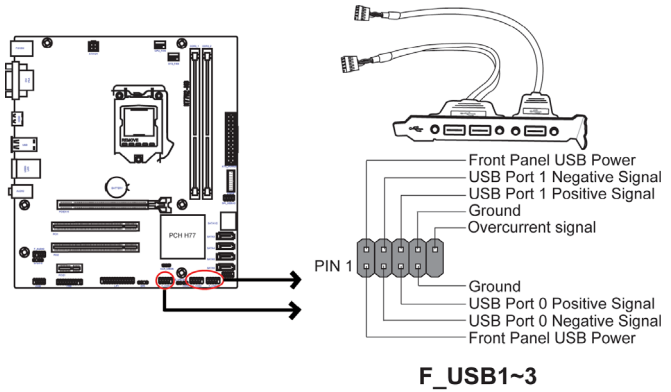

Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.

5. LPT: Onboard parallel port Header

This is a header that can be used to connect to the printer, scanner or other devices.

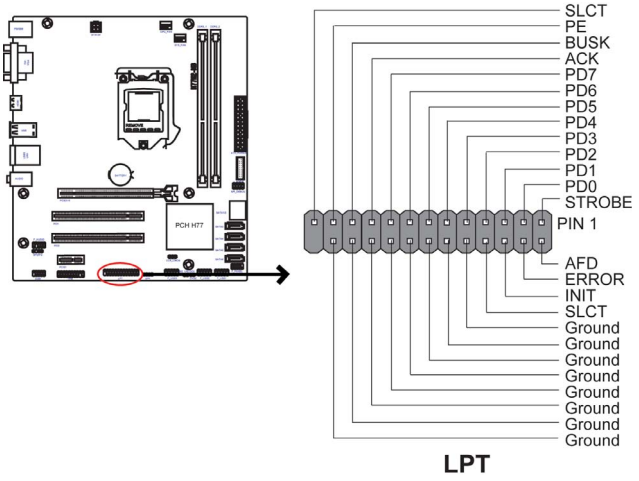

6. TPM: Trusted Platform Module header

Trusted platform module (TPM) is a published specification detailing a micro controller that can store secured information, and implementations of that specification.

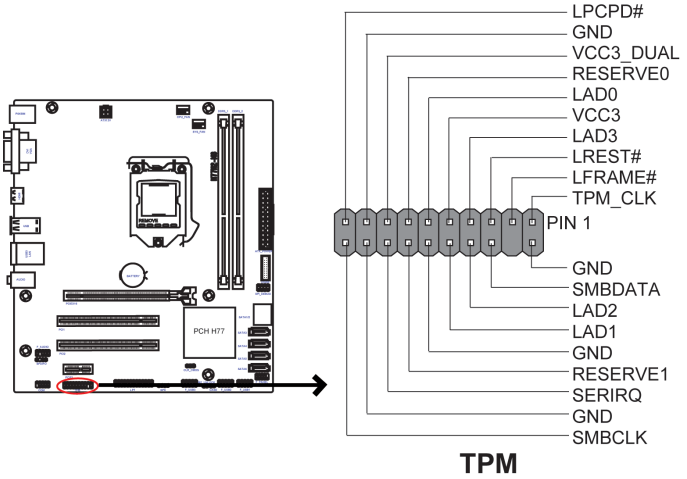

7. COM: Onboard serial port header

Connect a serial port extension bracket to this header to add a serial port to your system.

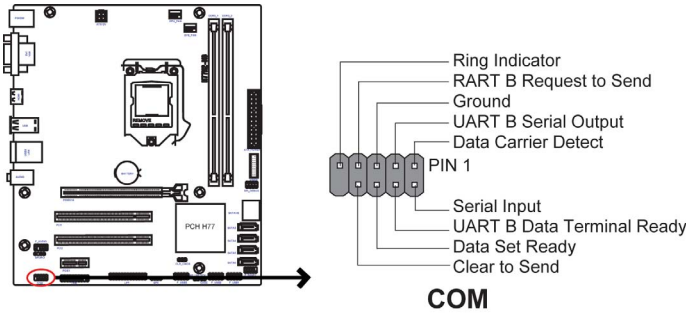

8. SPDIFO: SPDIF out header

This is an optional header that provides an SPDIFO (Sony/Philips Digital Interface) output to digital multimedia device through optical fiber or coaxial connector.

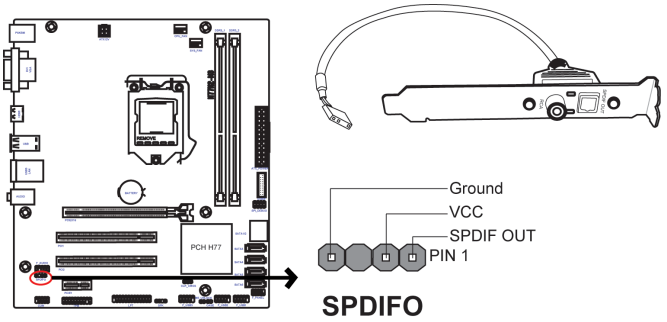

9. ME_UNLOCK: ME Unlock Header

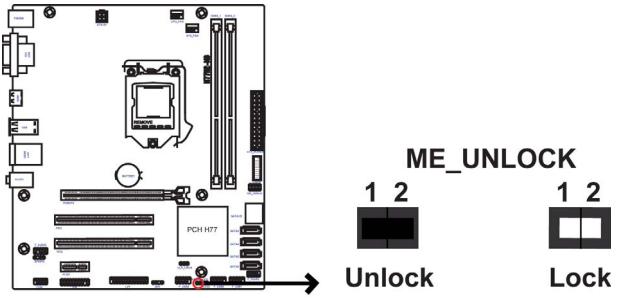

10. F_AUDIO: Front Panel Audio Header

The front panel audio header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access. This header supports HD audio by default. If you want connect an AC' 97 front panel audio to HD onboard headers, please set as below picture.

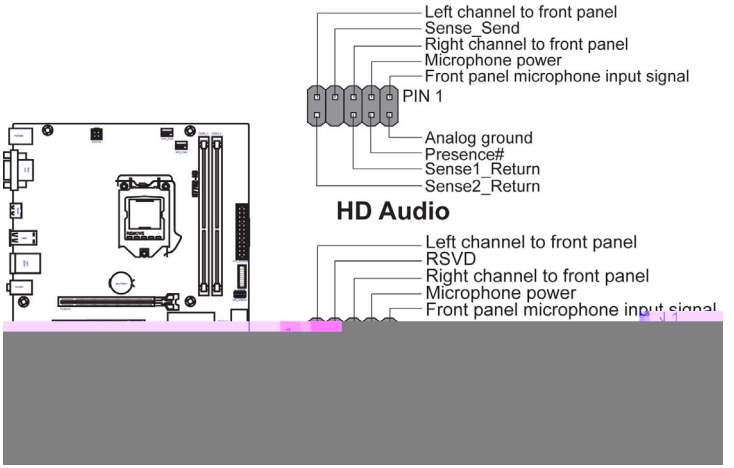

AC' 97 Audio Configuration: To enable the front panel audio connector to support AC97 Audio mode.

If you use AC' 97 Front Panel, please tick off the option of "Disabled Front Panel Detect ". If you use HD Audio Front Panel, please don' t tick off "Disabled Front Panel Detect ".

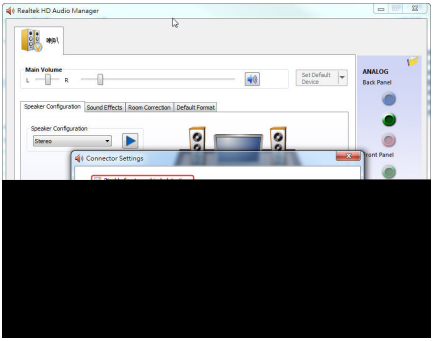

** For reference only*

If you use AC' 97 Front Panel, please don' t tick off "Using Front Jack Detect ". If you use HD Audio Front Panel, please tick off the option of "Using Front Jack Detect ".

** For reference only*

2-4-7. Connecting Case Components

After you have installed the motherboard into a case, you can begin connecting the motherboard components. Refer to the following:

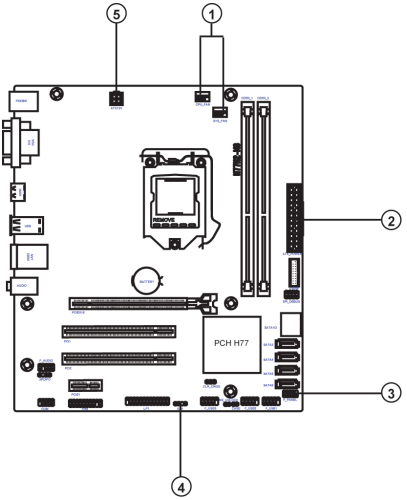

No.	Components
1	CPU_FAN & SYS_FAN
2	ATX_POWER
3	F_PANEL
4	SPK
5	ATX_12V

1. CPU_FAN (CPU cooling FAN Power Connector) & SYS_FAN (System Cooling FAN Power Connector)

Connect the CPU cooling fan cable to **CPU_FAN**.
Connect the system cooling fan connector to **SYS_FAN**.

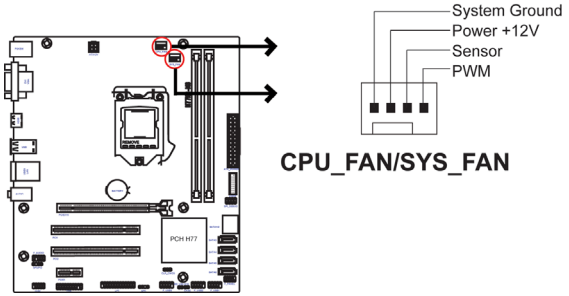

Users please note that the fan connector supports the CPU cooling fan of 1.1A ~ 2.2A (26.4W max) at +12V.

2 & 5. ATX_POWER (ATX 24-pin Power Connector) & ATX12V (ATX 12V Power Connector)

Connect the standard power supply connector to **ATX_POWER**.
Connect the auxiliary case power supply connector to **ATX12V**.

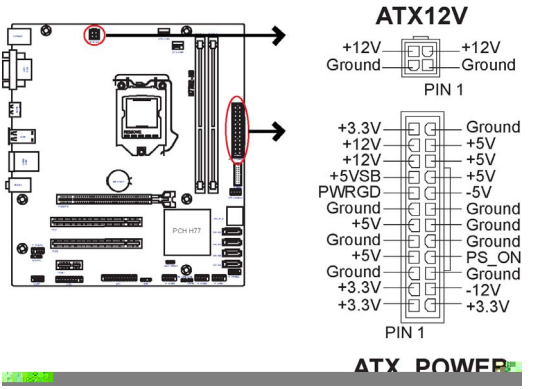

Connecting 24-pin power cable

The ATX 24-pin connector allows you to connect to ATX v2.x power supply.

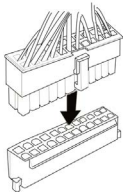

24-pin power cable

With ATX v2.x power supply, users please note that when installing 24-pin power cable, the latches of power cable and the ATX match perfectly.

Connecting 4-pin power cable

The ATX12V4P power connector is used to provide power to the CPU.

When installing 4-pin power cable, the latches of power cable and the ATX12V4P match perfectly.

4-pin power cable

4. SPK: Speaker

Connect the case speaker cable to **SPK**.

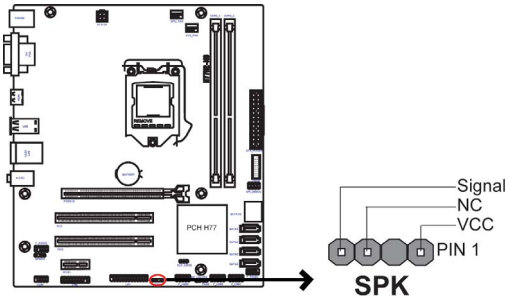

This concludes Chapter 2. The next chapter covers the BIOS.

Chapter 3
Using BIOS

About the Setup Utility

The computer uses the latest "American Megatrends Inc. " BIOS with support for Windows Plug and Play. The CMOS chip on the motherboard contains the ROM setup instructions for configuring the motherboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system's configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power Management features

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

The Standard Configuration

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:

- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup

Entering the Setup Utility

When you power on the system, BIOS enters the Power-On Self Test (POST) routines. POST is a series of built-in diagnostics performed by the BIOS. After the POST routines are completed, the following message appears:

Press DEL to enter SETUP

Press the delete key to access BIOS Setup Utility.

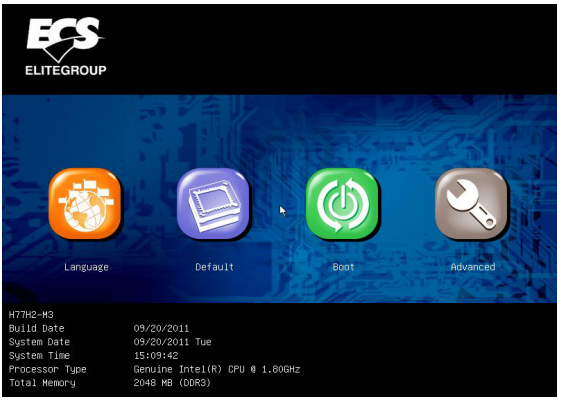

Resetting the Default CMOS Values

When powering on for the first time, the POST screen may show a "CMOS Settings Wrong" message. This standard message will appear following a clear CMOS data at factory by the manufacturer. You simply need to Load Default Settings to reset the default CMOS values.

Note: Changes to system hardware such as different CPU, memories, etc. may also trigger this message.

American Megatrends
H77H2-M3 Release 09/20/2011
Version 2.02.1205. Copyright (C) 2010 American Megatrends, Inc.
Press <F7> to enter BBS POPUP
Press <DEL> or <F2> to enter setup.
CMOS Settings Wrong

Using BIOS

When you start the Setup Utility, the main menu appears. The main menu of the Setup Utility displays a list of the options that are available. A highlight indicates which option is currently selected. Use the cursor arrow keys to move the highlight to other options. When an option is highlighted, execute the option by pressing <Enter>.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with a icon) lead to submenus that enable you to change the values for the option. Use the cursor arrow keys to scroll through the items in the submenu.

In this manual, default values are enclosed in parenthesis. Submenu items are denoted by a icon.

The default BIOS setting for this motherboard apply for most conditions with optimum performance. We do not suggest users change the default values in the BIOS setup and take no responsibility to any damage caused by changing the BIOS settings.

BIOS Navigation Keys

The BIOS navigation keys are listed below:

KEY	FUNCTION
ESC	Exits the current menu
↑↓→←	Scrolls through the items on a menu
+/-	Change Opt.
Enter	Select
F1	General Help
F2	Previous Value
F3	Optimized Defaults
F4	Save & Exit

1. For the purpose of better product maintenance, the manufacture reserves the right to change the BIOS items presented in this manual. The BIOS setup screens shown in this chapter are for reference only and may differ from the actual BIOS. Please visit the manufacture's website for updated manual.

2. In this Gui BIOS, you can operate by mouse or keyboard. Click : select item; Double click: enter; Right click: exit.

Language

Select the language icon and press <Enter> or double click the left key of the mouse to display the screen. Then you can choose the language: English, Traditional Chinese, Simple Chinese, Russian, Korean, German, Spanish, Italian, Portuguese, Japanese.

Default

Select the default icon and press <Enter> or double click the left key of the mouse to display the screen. Then you can load optimized defaults or not.

Boot

Select the boot icon and press <Enter> or double click the left key of the mouse to display the screen. Then you can choose the boot device.

Advanced

Select the advanced icon and press <Enter> or double click the left key of the mouse to display the screen.

Main Menu

This menu shows the information of BIOS and enables you to set the system language, date and time.

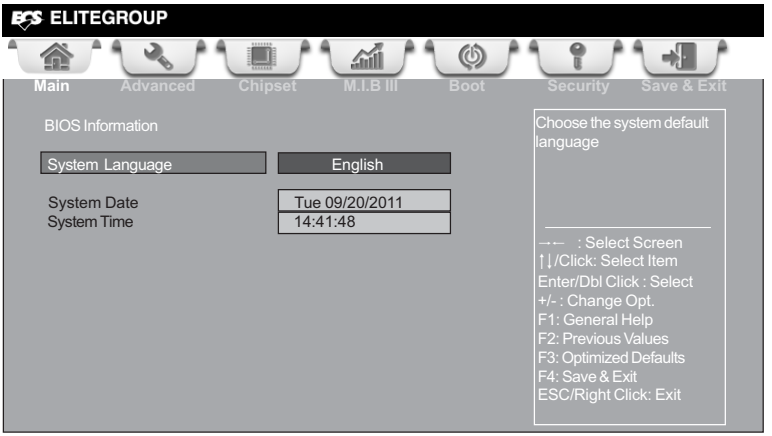

System Language (English)

This item is used to set system language.

Date & Time

The Date and Time items show the current date and time on the computer. If you are running a Windows OS, these items are automatically updated whenever you make changes to the Windows Date and Time Properties utility.

Advanced Menu

The Advanced menu items allow you to change the settings for the CPU and other system.

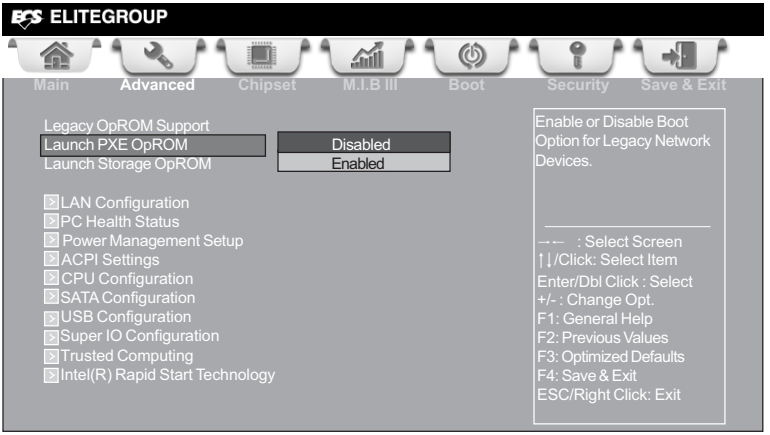

Launch PXE OpROM (Disabled)

The item enables or disables launch PXE Option ROM.

Launch Storage OpROM (Enabled)

Use this item to enable or disable the Storage OpROM.

LAN Configuration

The item in the menu shows the LAN-related information that the BIOS automatically detects.

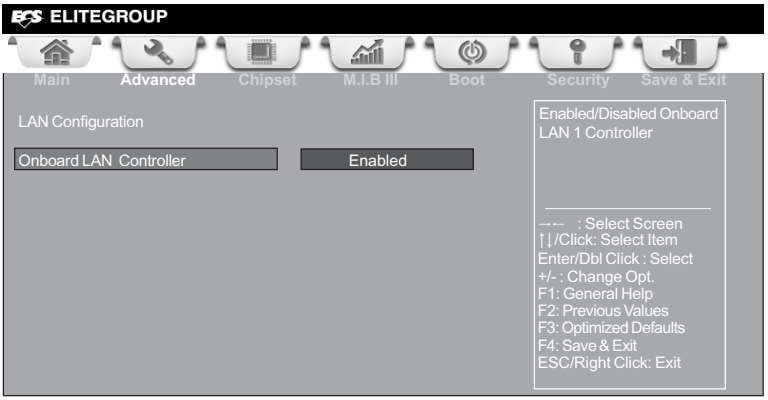

Onboard LAN Controller (Enabled)

Use this item to enable or disable the Onboard LAN.

Press <Esc> to return to the Advanced Menu page.

PC Health Status

On motherboards support hardware monitoring, this item lets you monitor the parameters for critical voltages, temperatures and fan speeds.

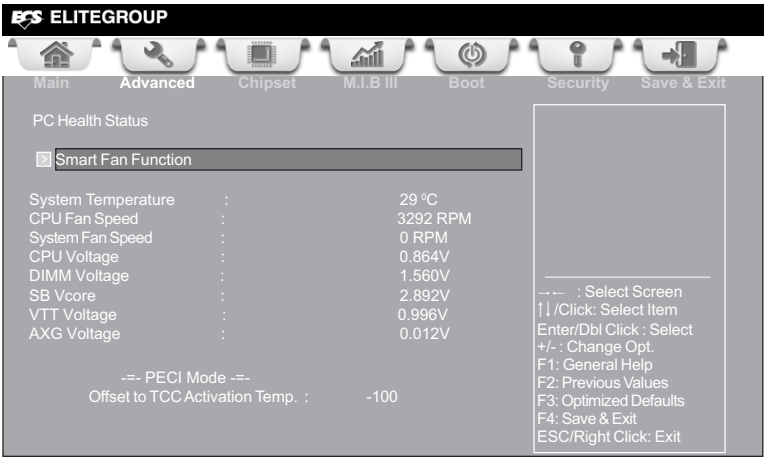

▶Smart Fan Function

Scroll to this item and press <Enter> to view the following screen:

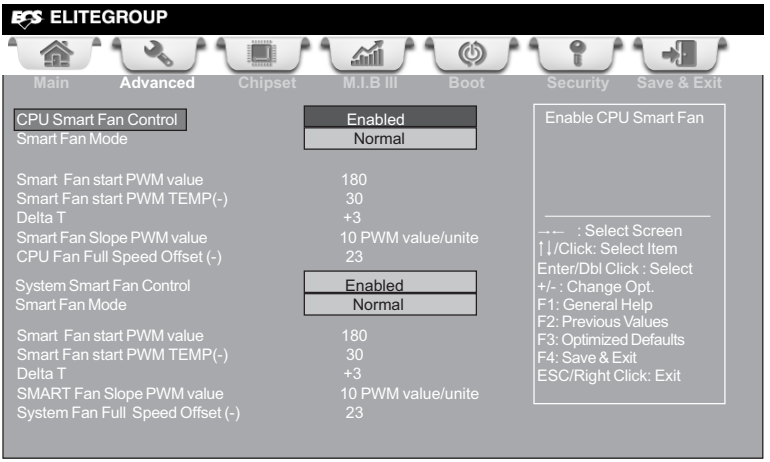

CPU/System Smart Fan Control (Enabled)

This item enables you to define the CPU/system by smartly adjusting the CPU/system Fan. When it is set at certain temperature, the CPU/system Fan PWM value will change accordingly.

Smart Fan Mode (Normal)

This item allows you to select the fan mode (Normal, Quiet, Silent, or Manual) for a better operation environment. If you choose Normal mode, the fan speed will be auto adjusted depending on the CPU temperature. If you choose Quite mode, the fan speed will be auto minimized for quiet environment. If you choose Silent mode, the fan speed will be auto restricted to make system more quietly. If you choose Manual mode, the fan speed will be adjust depending on users' parameters.

Smart Fan start PWM value (180)

This item is used to set the start PWM value of the smart fan.

Smart Fan start PWM TEMP(-) (30)

This item is used to set the start temperature of the smart fan.

DeltaT (+3)

This item specifies the range that controls CPU temperature and keeps it from going so high or so low when smart fan works.

Smart Fan Slope PWM value (10 PWM value/unite)

This item is used to set the Slope Select PWM of the smart fan.

CPU Fan Full Speed Offset(-) (23)

This item is used to set the CPU fan full speed offset value.

Press <Esc> to return to the PC Health Status page.

System Component Characteristics

These items display the monitoring of the overall inboard hardware health events, such as System temperature, CPU & DIMM voltage, CPU & System fan speed... etc.

- System Temperature
- CPU Fan Speed
- System Fan Speed
- CPU Voltage
- DIMM Voltage
- SB Vcore
- VTT Voltage
- AXG Voltage

Press <Esc> to return to the Advanced Menu page.

Power Management Setup

This page sets up some parameters for system power management operation.

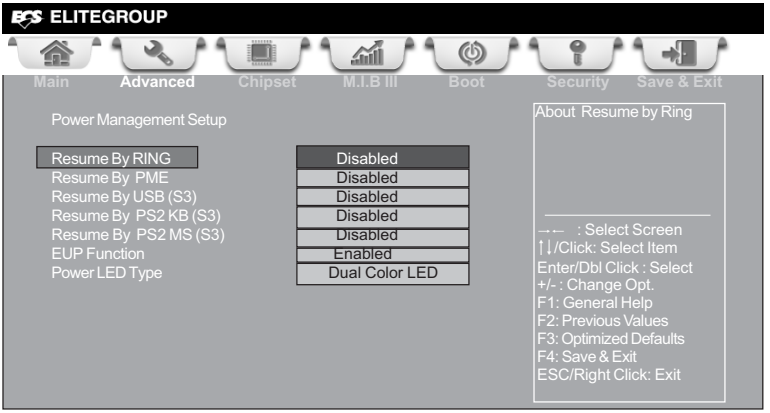

Resume By RING (Disabled)

An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state.

Resume By PME (Disabled)

The system can be turned off with a software command. If you enable this item, the system can automatically resume if there is an incoming call on the PCI Modem or PCI LAN card. You must use an ATX power supply in order to use this feature. Use this item to do wake-up action if inserting the PCI card.

Resume By USB (S3) (Disabled)

This item allows you to enable/disable the USB device wakeup function from S3 mode.

Resume By PS2 KB (S3) (Disabled)

This item enables or disables you to allow keyboard activity to awaken the system from power saving mode.

Resume By PS2 MS (S3) (Disabled)

This item enables or disables you to allow mouse activity to awaken the system from power saving mode.

EUP Function (Enabled)

This item allows user to enable or disable EUP support.

Power LED Type (Dual Color LED)

This item shows the type of the Power LED.

Press <Esc> to return to the Advanced Menu page.

ACPI Configuration

The item in the menu shows the highest ACPI sleep state when the system enters suspend.

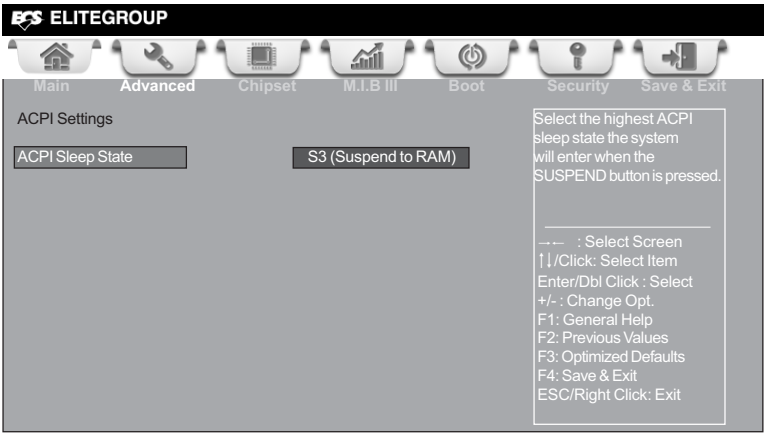

ACPI Sleep State [S3(Suspend to RAM)]

This item allows user to enter the ACPI S3 (Suspend to RAM) Sleep State (default).

Press <Esc> to return to the Advanced Menu page.

CPU Configuration

The item in the menu shows the CPU.

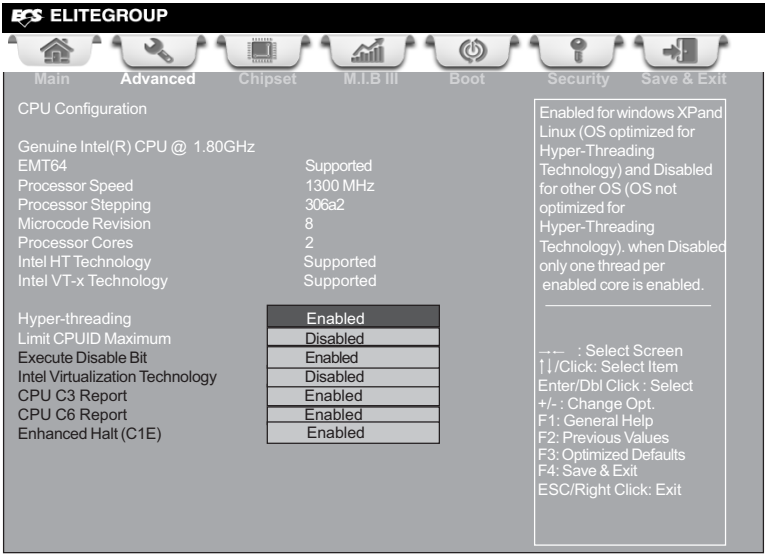

Genuine Intel(R) CPU @ 1.80GHz

This is display-only field and displays the information of the CPU installed in your computer.

EMT64 (Supported)

This item shows the computer supports EMT64.

Processor Speed (1300MHz)

This item shows the current processor speed.

Processor Stepping (306a2)

This item shows the processor stepping version.

Microcode Revision (8)

This item shows the Microcode version.

Processor Cores (2)

This item shows the core number of the processor.

Intel HT Technology (Supported)

This item shows the computer supports Intel HT Technology.

Intel VT-x Technology (Supported)

This item shows the computer supports Intel VT-x Technology.

Hyper-threading (Enabled)

This item only available when the chipset supports Hyper-threading and you are using a Hyper-threading CPU.

Limit CPUID Maximum (Disabled)

Use this item to enable or disable the maximum CPUID value limit. When supports Prescott and LGA775 CPUs, enables this to prevent the system from "rebooting" when trying to install Windows NT 4.0.

Excute Disable Bit (Enabled)

This item allows the processor to classify areas in memory by where application code can execute and where it cannot. When a malicious worm attempts to insert code in the buffer, the processor disables code execution, preventing damage or worm propagation. Replacing older computers with Execute Disable Bit enabled systems can halt worm attacks, reducing the need for virus related repair.

Intel Virtualization Technology (Disabled)

When disabled, a VMM cannot utilize the additional hardware capabilities provided by Vandor Pool Technology.

CPU C3 Report (Enabled)

Use this item to enable or disable CPU C3(ACPI C2) report to OS.

CPU C6 Report (Enabled)

Use this item to enable or disable CPU C6(ACPI C3) report to OS.

Enhanced Halt (C1E) (Enabled)

Use this item to enable the CPU energy-saving function when the system is not running.

Press <Esc> to return to the Advanced Menu page.

SATA Configuration

Use this item to show the mode of serial SATA configuration options.

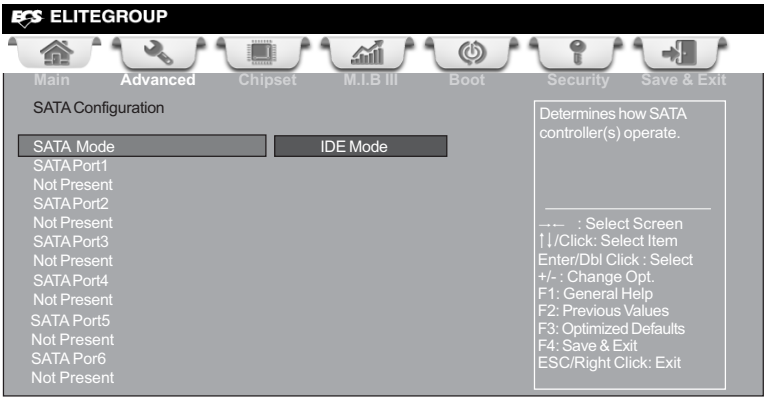

SATA Mode (IDE Mode)

Use this item to select SATA mode.

SATA Port 1~6 (Not Present)

This motherboard supports six SATA channels and each channel allows one SATA device to be installed. Use these items to configure each device on the SATA channel.

Press <Esc> to return to the SATA Configuration page.

Press <Esc> to return to the Advanced Menu page.

USB Configuration

Use this item to show the information of USB configuration.

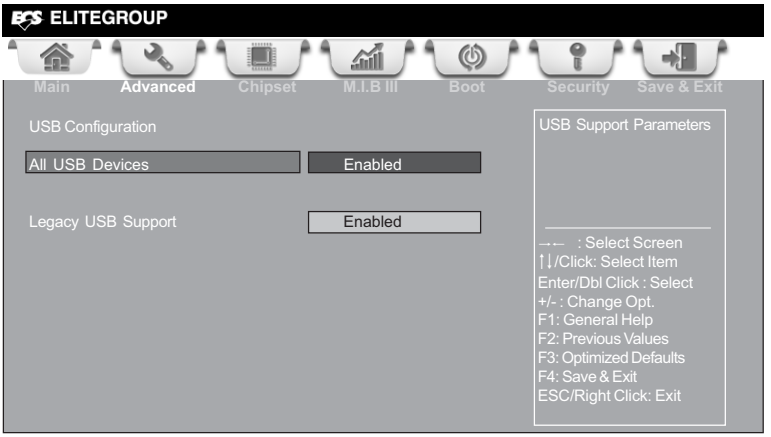

All USB Devices (Enabled)

Use this item to enable or disable all USB devices.

Legacy USB Support (Enabled)

Use this item to enable or disable support for legacy USB devices.

Press <Esc> to return to the Advanced Menu page.

Super IO Configuration

Use this item to show the information of Super IO configuration.

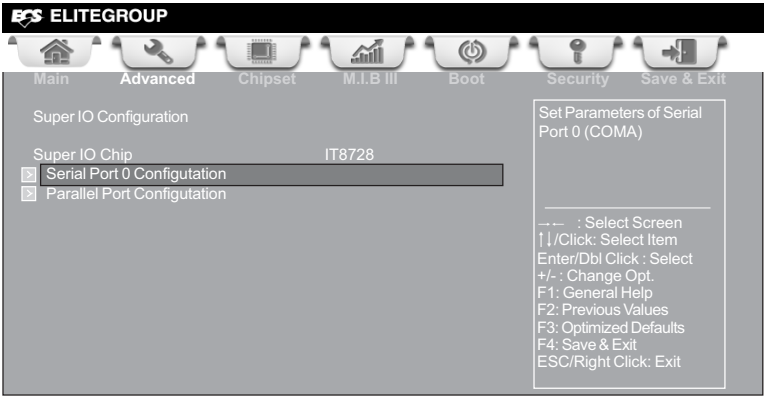

Super IO Chip (IT8728)

This item shows the information of the super IO chip.

▶Serial Port 0 Configuration

Scroll to this item and press <Enter> to view the following screen:

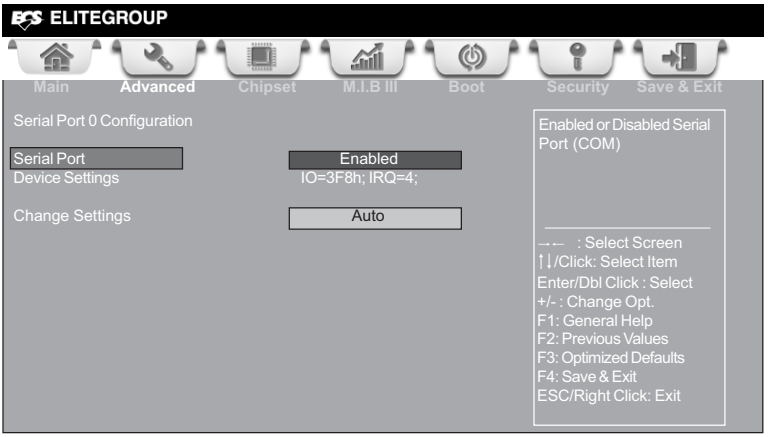

Serial Port (Enabled)

This item allows you to enable or disable serial port.

Device Settings (IO=3F8h; IRQ=4)

This item shows the information of the device settings.

Change Settings (Auto)

Use this item to change device settings.

Press <Esc> to return to the Super IO Configuration page.

▶Parallel Port Configuration

Scroll to this item and press <Enter> to view the following screen:

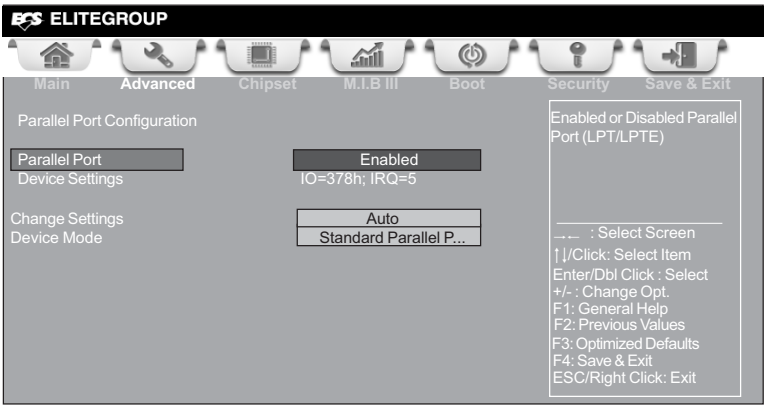

Parallel Port (Enabled)

This item allows you to enable or disable parallel port.

Device Settings (IO=378h; IRQ=5)

This item shows the information of the device settings.

Change Settings (Auto)

Use this item to change device settings.

Device Mode (Standard Parallel P...)

This item shows the information of the device mode.

Press <Esc> to return to the Super IO Configuration page.

Press <Esc> to return to the Advanced Menu page.

Trusted Computing

Use this item to show the information of trusted computing configuration.

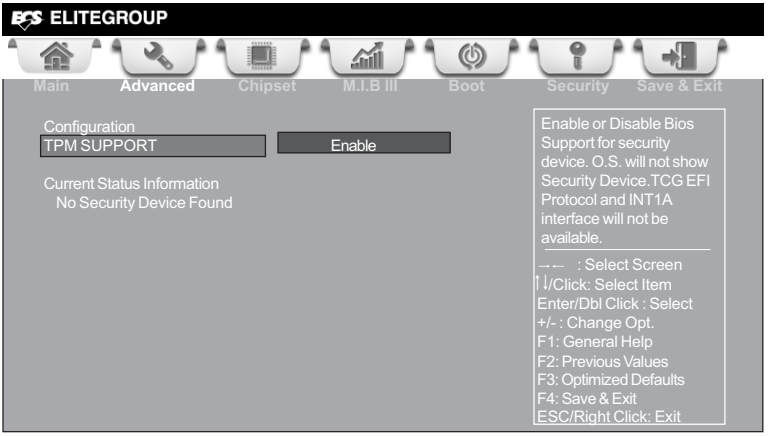

TPM Support (Enable)

Use this item to enable or disable the TPM port.O.S. will not show TPM.Reset of platform is required.

Press <Esc> to return to the Advanced Menu page.

Intel(R) Rapid Start Technology

Use this item to show the information of Intel(R) Rapid Start Technology.

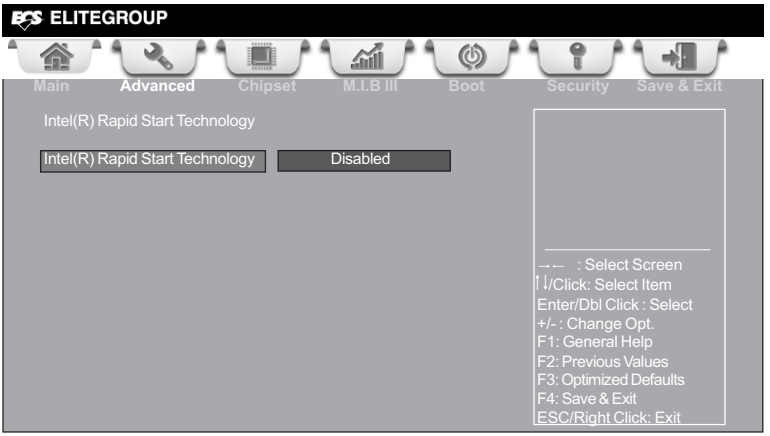

Intel(R) Rapid Start Technology (Disabled)

Use this item to enable or disable the Intel(R) Rapid Start Technology.

Chipset Menu

The chipset menu items allow you to change the settings for the North chipset, South chipset and other system.

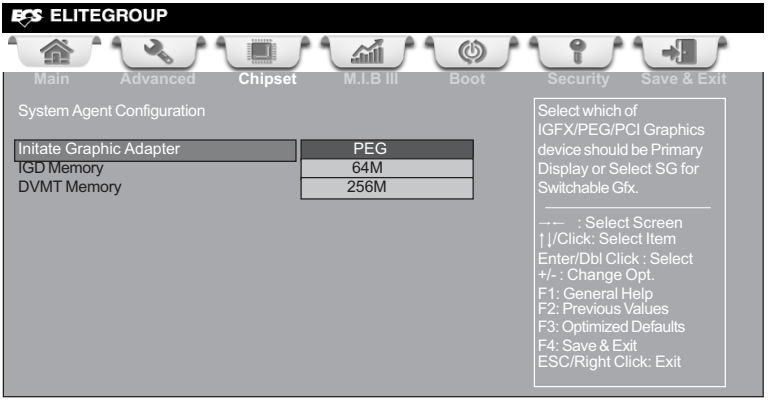

Initate Graphic Adapter (PEG)

This item allows you to select graphics controller to use as the primary boot device.

IGD Memory (64M)

This item shows the information of the IGD (Internal Graphics Device) memory.

DVMT Memory (256M)

When set to Fixed Mode, the graphics driver will reserve a fixed position of the system memory as graphics memory, according to system and graphics requirements.

▶ **PCH Configuration**

Scroll to this item and press <Enter> to view the following screen:

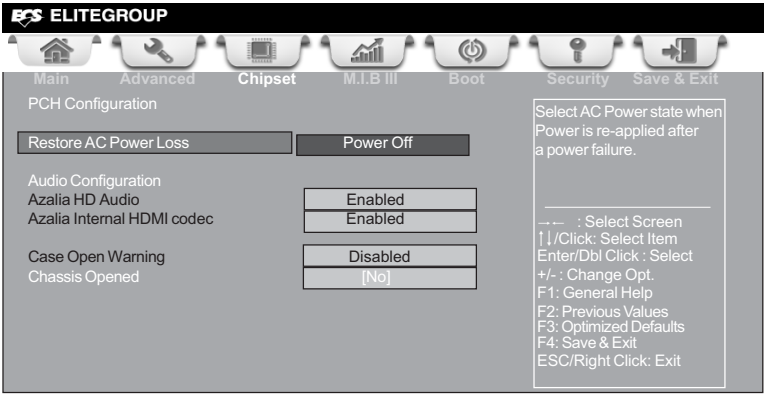

Restore AC Power Loss (Power Off)

This item enables your computer to automatically restart or return to its operating status.

Audio Configuration

This item shows the information of the audio configuration.

Azalia HD Audio (Enabled)

This item enables or disables Azalia HD audio.

Azalia Internal HDMI codec (Enabled)

This item enables or disables Azalia Internal HDMI codec.

Case Open Warning (Disabled)

This item enables or disables the warning if the case is opened up, and the item below indicates the current status of the case.

Chassis Opened (No)

This item indicates whether the case has been opened.

Press <Esc> to return to the Chipset Menu page.

► **Management Engine Technology Configuration**

Scroll to this item and press <Enter> to view the following screen:

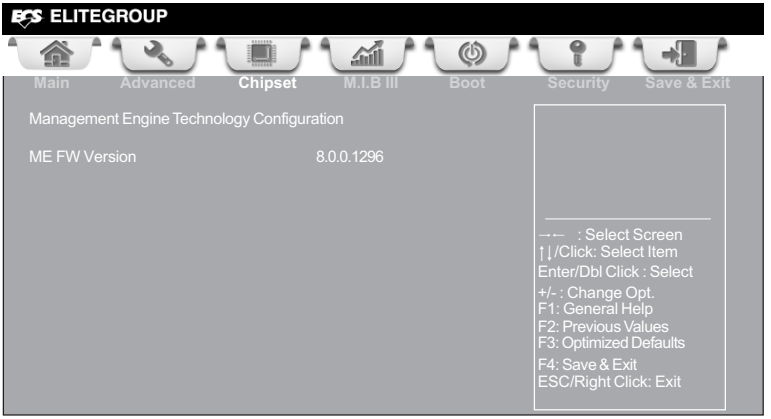

ME FW Version (8.0.0.1296)

This item shows the ME FW version.

Press <Esc> to return to the chipset menu page.

M.I.B III (MB Intelligent BIOS III) Menu

This page enables you to set the clock speed and system bus for your system. The clock speed and system bus are determined by the kind of processor you have installed in your system.

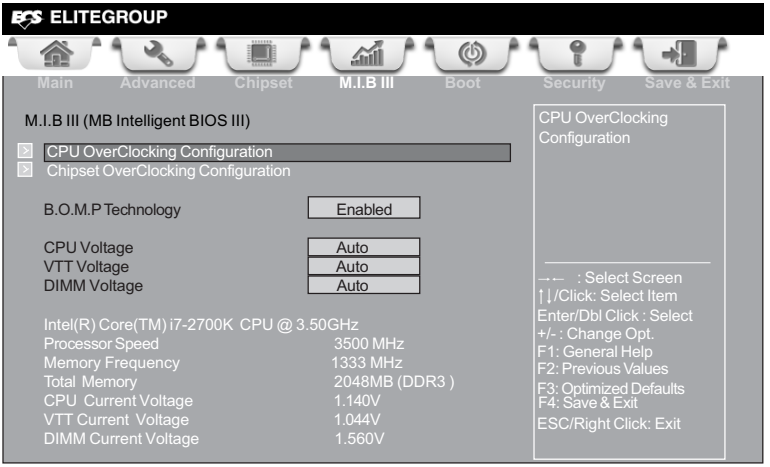

▶CPU OverClocking Configuration

Scroll to this item to view the following screen:

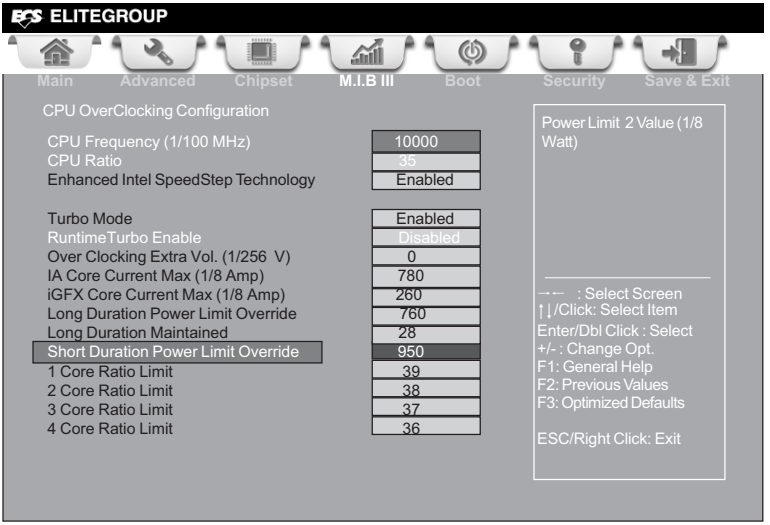

CPU Frequency (1/100 MHz) (10000)

This item shows the information of CPU Frequency.

CPU Ratio (35)

This item allows users to control non turbo CPU ratio.

Enhanced Intel SpeedStep Technology (Enabled)

This item allows users to enable or disable the EIST (Enhanced Intel SpeedStep Technology).

Turbo Mode (Enabled)

This item allows you to control the Intel Turbo Boost Technology.

Runtime Turbo Enable (Disabled)

This item shows if CPU support Runtime Turbo.

Over Clocking Extra Vol. (1/256 V) (0)

This item allows you to control Extra CPU Voltage.

IA Core Current Max (1/8 Amp) (780)

Use this item to control CPU Current Limit.

iGFX Core Current Max (1/8 Amp) (260)

Use this item to control iGFX Core Current Limit.

Long Duration Power Limit Override (760)

Intel(R) Turbo Boost Technology will use this power limit during the Long Duration Power Limit Time Window.

Long Duration Maintained (28)

Use this item to control the time window over PL1 Value should be maintained. This is for Turbo Mode.

Short Duration Power Limit Override (950)

Intel(R) Turbo Boost Technology will use this power limit for a very short duration. After that, the Long Duration Power Limit will be honored.

1/2/3/4 Core Ratio Limit (39/38/37/36)

This item shows the Core Ratio Limit Value.

▶ **Memory Multiplier Configuration**

Scroll to this item to view the following screen:

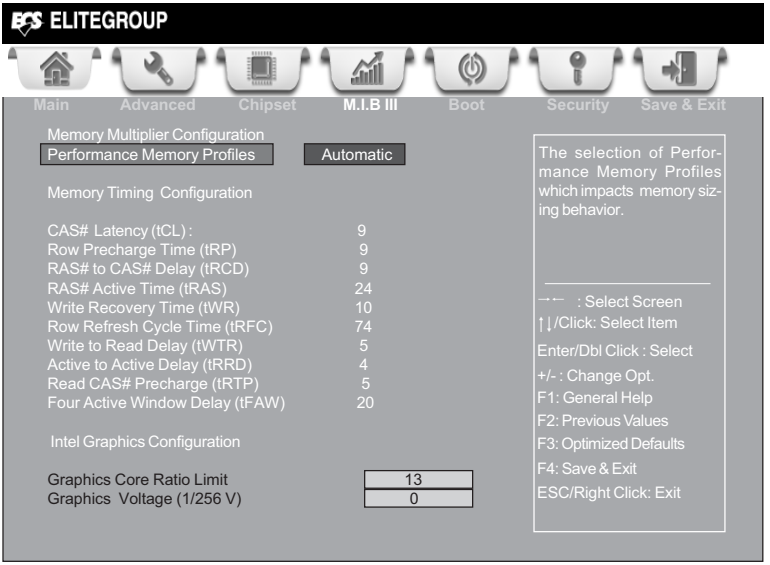

Memory Multiplier Configuration

This item shows the information of Memory multiplier Configuration.

Memory Timing Configuration

This item shows the information of Memory Timing.

CAS Latency (tCL) (9)

This item determines the operation of DDR SDRAM memory CAS (colulmn address strobe). It is recommended that you leave this item at the default value. The 2T setting requires faster memory that specifically supports this mode.

Row Precharge Time (tRP) (9)

This item specifies Row precharge to Active or Auto-Refresh of the same bank.

RAS# to CAS# Delay (tRCD) (9)

This item specifies the RAS# to CAS# delay to Rd/Wr command to the same bank.

RAS# Active Time (tRAS) (24)

This item specifies the RAS# active time.

Write Recovery Time (tWR) (10)

This item specifies the write recovery time.

Row Refresh Cycle Time (tRFC) (74)

This item specifies the row refresh cycle time.

Write to Read Delay (twTR) (5)

This item specifies the write to read delay time.

Active to Active Delay (tRRDmin) (4)

This item controls the ACTIVE bank x to ACTIVE bank y in memory clock cycles.

Read CAS# Precharge (tRTP) (5)

This item controls the Read to PRECHARGE delay for memory devices, in memory clock cycles.

Four Active Window Delay (tFAW) (20)

This item controls the four bank activate time in memory clock cycles.

Intel Graphics Configuration

This item shows the information of Intel Graphics Configuration.

Press <Esc> to return to the M.I.B III page.

Warning:
Over-clocking components can adversely affect the reliability of the system and introduce errors into your system. Over-clocking can permanently damage the motherboard by generating excess heat in components that are run beyond the rated limits.

Fail-Safe Procedures for Over-clocking

When end-users encounter failure after attempting over-clocking, please take the following steps to recover from it.

1. Shut down the computer.
2. Press and hold the “Page Up Key (PgUp)” of the keyboard, and then boot the PC up.
3. Two seconds after the PC boots up, release the “Page Up Key (PgUp)”.
4. The BIOS returns to the default setting by itself.

Boot Menu

This page enables you to set the keyboard NumLock state.

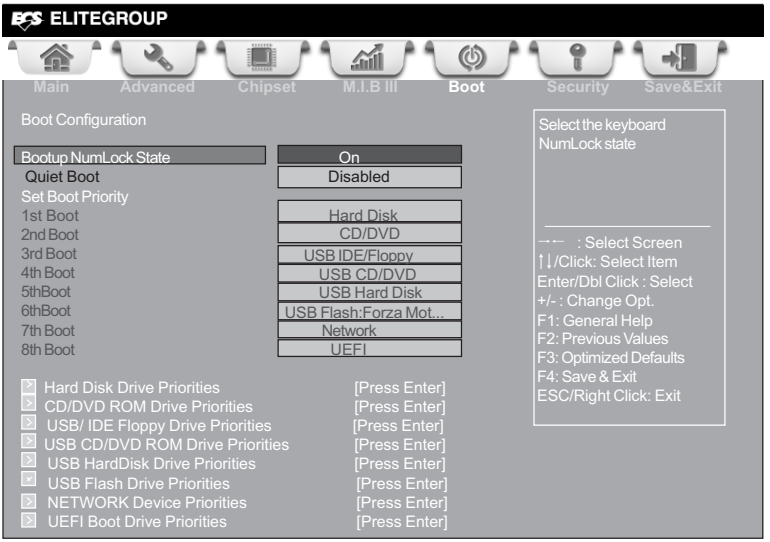

Boot Configuration

This item shows the information of the Boot Configuration.

Bootup NumLock State (On)

This item enables you to select NumLock state.

Set Boot Priority

This item enables you to set boot priority for all boot devices.

1st/2nd/3rd/4th/5th/6th/7th/8th Boot

These items show the boot priorities.

Hard Disk / CD/DVD ROM / USB/IDE Floppy / USB CD/DVD ROM / USB HardDisk / USB Flash / NETWORK / UEFI Boot Drive Priorities

These items enable you to specify the sequence of loading the operating system. Press <Enter> to see the submenu.

Security Menu

This page enables you to set setup administrator password and user password.

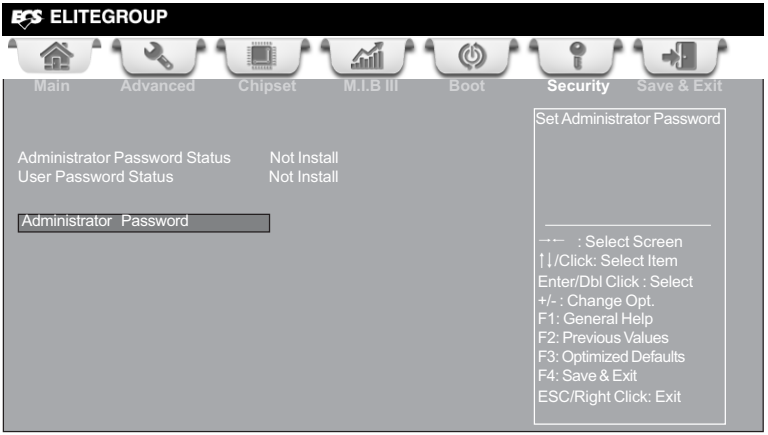

Administrator Password

Press <Enter> to setup administrator password.

Save & Exit Menu

This page enables you to exit system setup after saving or without saving the changes.

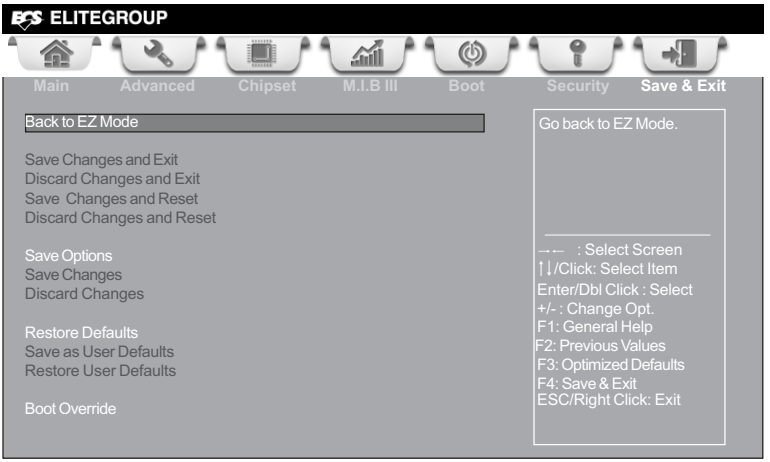

Back to EZ Mode

This item enables you to back to EZ mode.

Save Changes and Exit

This item enables you to exit system setup after saving the changes.

Discard Changes and Exit

This item enables you to exit system setup without saving any changes.

Save Changes and Reset

This item enables you to reset the system setup after saving the changes.

Discard Changes and Reset

This item enables you to reset system setup without saving any changes.

Save Options

This item enables you to save the options that you have made.

Save Changes

This item enables you to save the changes that you have made.

Discard Changes

This item enables you to discard any changes that you have made.

Restore Defaults

This item enables you to restore the system defaults.

Save as User Defaults

This item enables you to save the changes that you have made as user defaults.

Restore User Defaults

This item enables you to restore user defaults to all the setup options.

Boot Override

Use this item to select the boot device.

Updating the BIOS

You can download and install updated BIOS for this motherboard from the manufacturer's Website. New BIOS provides support for new peripherals, improvements in performance, or fixes for known bugs. Install new BIOS as follows:

1. If your motherboard has a BIOS protection jumper, change the setting to allow BIOS flashing.
2. If your motherboard has an item called Firmware Write Protect in Advanced BIOS features, disable it. (Firmware Write Protect prevents BIOS from being overwritten.)
3. Prepare a bootable device or create a bootable system disk. (Refer to Windows online help for information on creating a bootable system disk.)
4. Download the Flash Utility and new BIOS file from the manufacturer's Web site. Copy these files to the bootable device.
5. Turn off your computer and insert the bootable device in your computer. (You might need to run the Setup Utility and change the the boot priority items on the Advanced BIOS Features Setup page, to force your computer to boot from the bootable device first.)
6. At the C:\ or A:\ prompt, type the Flash Utility program name and the file name of the new BIOS and then press <Enter>. Example: AFUDOS.EXE 040706.ROM
7. When the installation is complete, remove the bootable device from the computer and restart your computer. If your motherboard has a Flash BIOS jumper, reset the jumper to protect the newly installed BIOS from being overwritten. The computer will restart automatically.

This concludes Chapter 3. Refer to the next chapter for information on the software supplied with the motherboard.

Chapter 4

Using the Motherboard Software

Auto-installing under Windows XP/Vista/7

The auto-install DVD-ROM makes it easy for you to install the drivers and software. The support software DVD-ROM disc loads automatically under Windows XP/Vista/7. When you insert the DVD-ROM disc in the DVD-ROM drive, the auto-run feature will automatically bring up the installation screen. The screen has four buttons on it: **Setup**, **Utilities**, **Browse CD** and **Exit**.

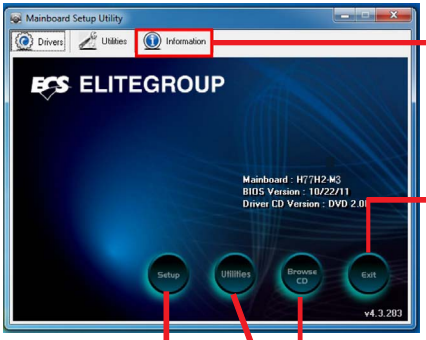

Information:
Displays the path for all software and drivers available on the disk.

Click "**Exit**" button to close the Auto-Setup window.

Browse CD:
Open Windows Explorer and show the contents of the support disk.

Click the "**Setup**" button to select and run the software installation program.

Click the "**Utilities**" button to select and install ECS Intelligent Utility.

Running Setup

Follow these instructions to install device drivers and software for the motherboard:

1. Click **Setup**. The installation program begins:

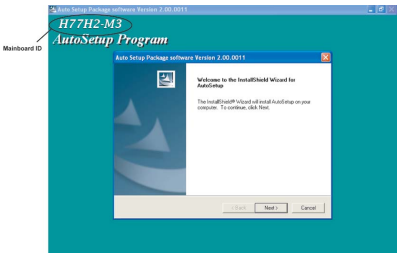

The following screens are examples only. The screens and driver lists will be different according to the motherboard you are installing.

The motherboard identification is located in the upper left-hand corner.

2. Click **Next.** The following screen appears:

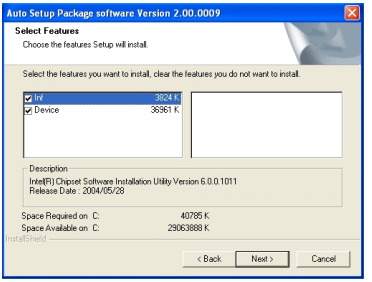
Auto Setup Package software Version 2.00.0009
Select Features
Choose the features Setup will install.
Select the features you want to install, clear the features you do not want to install.
Inf 3824 K
Device 36961 K
Description
Intel(R) Chipset Software Installation Utility Version 6.0.0.1011
Release Date : 2004/05/28
Space Required on C: 40785 K
Space Available on C: 29063888 K
InstallShield
< Back
Next >
Cancel

3. Check the box next to the items you want to install. The default options are recommended.

4. Click **Next** to run the Installation Wizard. An item installation screen appears:

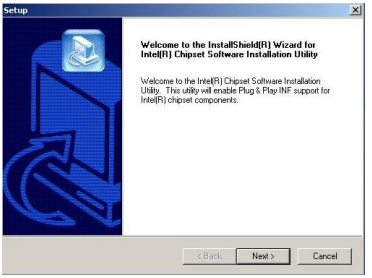
Setup
Welcome to the InstallShield(R) Wizard for Intel(R) Chipset Software Installation Utility
Welcome to the Intel(R) Chipset Software Installation Utility. This utility will enable Plug & Play INF support for Intel(R) chipset components.
< Back
Next >
Cancel

5. Follow the instructions on the screen to install the items.

Drivers and software are automatically installed in sequence. Follow the onscreen instructions, confirm commands and allow the computer to re-start a few times to complete the installation.

Windows Vista/7 will appear below UAC (User Account Control) message after the system restart. You must select "Allow" to install the next driver. Continue this process to complete the drivers installation.

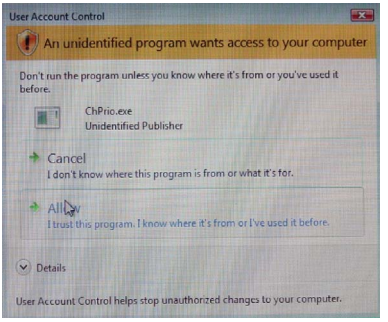
User Account Control
An unidentified program wants access to your computer
Don't run the program unless you know where it's from or you've used it before.
ChPric.exe
Unidentified Publisher
Cancel
I don't know where this program is from or what it's for.
Allow
I trust this program. I know where it's from or I've used it before.
Details
User Account Control helps stop unauthorized changes to your computer.

Manual Installation

If the auto-install DVD-ROM does not work on your system, you can still install drivers through the file manager for your OS (for example, Windows Explorer). Look for the chipset and motherboard model, and then browse to the directory and path to begin installing the drivers. Most drivers have a setup program (SETUP.EXE) that automatically detects your operating system before installation. Other drivers have the setup program located in the operating system subfolder.

If the driver you want to install does not have a setup program, browse to the operating system subfolder and locate the readme text file (README.TXT or README.DOC) for information on installing the driver or software for your operating system.

ECS Utility Software (Intelligent EZ Utility)

ECS Intelligent EZ Utility provides friendly interfaces under Windows O.S, which makes your computing more easily and conveniently.

These software(s) are subject to change at anytime without prior notice. Please refer to the support disk for available software.

eSF

eSF(Smart Fan) utility provides easy and safe way to adjust fan speed in accordance with your PC's system loading and temperature.

It has five modes to adjust fan speed in a safe range without entering the BIOS to optimize your system cooling environment.

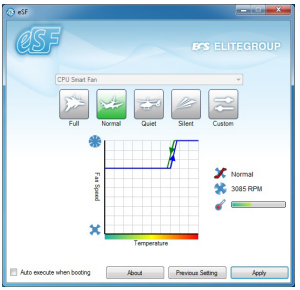

eDLU

ECS eDLU utility makes updating drivers fast and easy. eDLU saves time and hassle by listing all the latest drivers online. Just select the one you prefer and start to download and install the drivers.

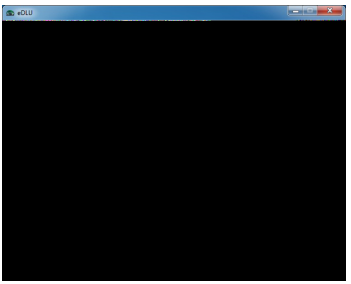

eBLU

ECS eBLU utility makes BIOS update faster and easier. eBLU will list the latest BIOS with a default check-mark. Click"install" button to install.

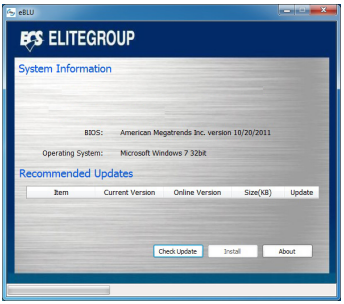

eOC

ECS eOC Utility is a simple over-clocking tool that provides user-friendly windows operation interface for novices and over-clockers. Combining with ECS MIB III technology, eOC challenges the undiscovered over-clocking capability than ever before.

Monitor

Easy Tuning

Advance Tuning

Options

Chapter 5

Intel® Matrix Storage Manager RAID Configuration

The Intel® Matrix Storage Manager allows you to configure RAID 0, and 1 sets on the external Serial ATA hard disk drives.

Before creating a RAID set

Prepare the following items:

1. One SATA HDD.
2. A write-enabled floppy disk.
3. Microsoft® Windows® OS installation disk (Windows XP/Vista).
4. Motherboard support CD with Intel® Matrix Storage Manager driver.

Complete the following steps before you create a RAID set:

1. Install the external Serial ATA hard disk drive (HDD) on your system.
2. Set the *Onboard SATA Mode* item in the BIOS to *RAID*...

   See section "Integrated Peripherals" for details.

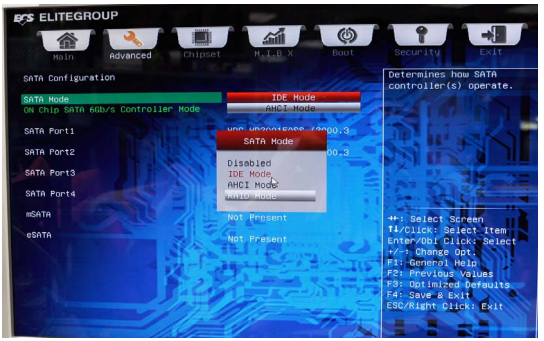

3. Enter the Intel® Matrix Storage Manager option to set up your RAID configuration.
4. Create an Intel® Matrix Storage Manager driver disk for Windows® OS installation. See section "Creating a RAID driver disk" for details.
5. Install the Intel® Matrix Storage Manager driver after the Windows® OS had been installed.

Entering Intel® Matrix Storage Manager RAID BIOS utility

1. During POST, press <Ctrl-I> to enter the Intel® Matrix Storage Manager RAID BIOS menu.

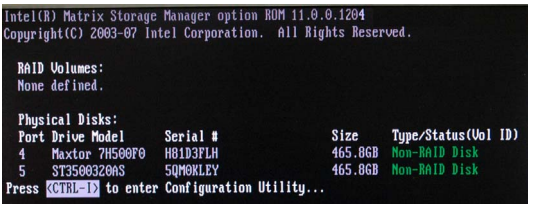
Intel(R) Matrix Storage Manager option ROM 11.0.0.1204
Copyright(C) 2003-07 Intel Corporation. All Rights Reserved.
RAID Volumes:
None defined.
Physical Disks:
Port Drive Model Serial # Size Type/Status(Vol ID)
4 Maxtor 7H500F0 H81D3FLH 465.8GB Non-RAID Disk
5 ST3500320AS 5QM0KLEY 465.8GB Non-RAID Disk
Press <CTRL-I> to enter Configuration Utility...

2. The main Intel® Matrix Storage Manager RAID BIOS menu appears.

3. Use the arrow keys to move the color bar and navigate through the items.

Intel(R) Rapid Storage Technology - Option ROM - 11.0.0.1204
Copyright(C) 2003-11 Intel Corporation. All Rights Reserved.
[MAIN MENU]
1. Create RAID Volume
2. Delete RAID Volume
3. Reset Disks to Non-RAID
4. Recovery Volume Options
5. Acceleration Options
6. Exit
[DISK/VOLUME INFORMATION]
RAID Volumes:
None defined.
Physical Devices:
ID Device Model Serial # Size Type/Status(Vol ID)
2 WDC WD2001FASS-0 WD-WMAUR0803571 1.8TB Non-RAID Disk
3 SAMSUNG HD203WI S1UYJ1BZ203313 1.8TB Non-RAID Disk
[↑↓]-Select [ESC]-Exit [ENTER]-Select Menu

Creating a RAID set

1. In the main Intel® Matrix Storage Manager RAID BIOS menu, highlight *Create RAID Volume* using the up/down arrow key then press <Enter>.



2. When the *RAID Level* item is highlighted, use the up/down arrow key to select the RAID set that you want to create.

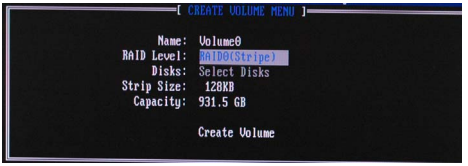

When more than two HDDs are installed in your computer, the *Disks* item will be selectable. Then users can select the HDD that you want to belong to the RAID set. Please be noticed that selecting a wrong disk will result in losing the original data of the HDD.

3. Key in the RAID volume capacity. Use the up/down arrow to choose the *Capacity*. The default value indicates the maximum capacity using the selected disks. Entering a lower capacity allows you to create a second volume on these disks.

4. When done, press <Enter> to confirm the creation of the RAID set. A dialogue box appears to confirm the action. Press <Y> to confirm; otherwise, press <N>.

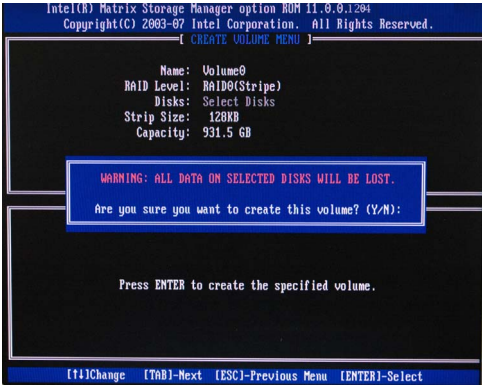
Intel(R) Matrix Storage Manager option ROM 11.0.0.1204
Copyright(C) 2003-07 Intel Corporation. All Rights Reserved.
[CREATE VOLUME MENU]
Name: Volume0
RAID Level: RAID0(Stripe)
Disks: Select Disks
Strip Size: 128KB
Capacity: 931.5 GB
WARNING: ALL DATA ON SELECTED DISKS WILL BE LOST.
Are you sure you want to create this volume? (Y/N):
Press ENTER to create the specified volume.
[↑↓]Change [TAB]-Next [ESC]-Previous Menu [ENTER]-Select

Pressing <Y> deletes all the data in the HDDs.

5. The following screen appears, displaying the relevant information about the RAID set you created.

[DISK/VOLUME INFORMATION]
RAID Volumes:
ID Name Level Strip Size Status Bootable
0 Volume0 RAID0(Stripe) 128KB 931.5GB Normal Yes
Physical Disks:
Port Drive Model Serial # Size Type/Status(Vol ID)
4 Maxtor 7H500F0 H81D3FLH 465.8GB Member Disk(0)
5 ST3500320AS 5QM0KLEY 465.8GB Member Disk(0)

Users please be noted that RAID 0 (Stripe) is set to accelerate the data access, and RAID 1 (Mirror) is set to provide the data backup. If you want to set RAID 0, you need to set the *2nd Boot Device* item in the BIOS to *Intel Volume0*. See section "Advanced Setup" for details.

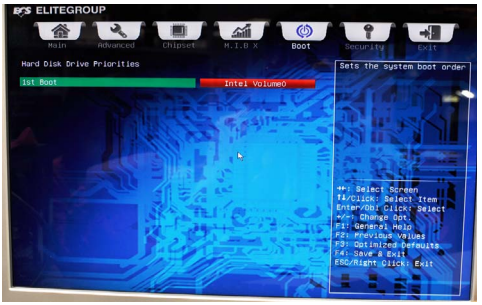

Deleting a RAID set

1. In the main Intel® Matrix Storage Manager RAID BIOS menu, highlight *Delete RAID Volume* using the up/down arrow key then press <Enter>.



2. Use the space bar to select the RAID set you want to delete.

   Press the <Del> key to delete the set.

3. A dialogue box appears to confirm the action. Press <Y> to confirm; otherwise, press <N>.

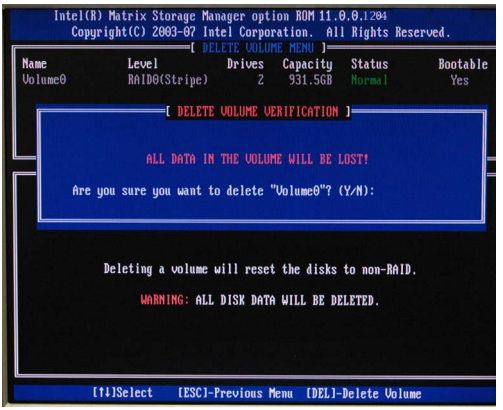
Intel(R) Matrix Storage Manager option ROM 11.0.0.1204
Copyright(C) 2003-07 Intel Corporation. All Rights Reserved.
[DELETE VOLUME MENU]
Name Level Drives Capacity Status Bootable
Volume0 RAID0(Stripe) 2 931.5GB Normal Yes
[DELETE VOLUME VERIFICATION]
ALL DATA IN THE VOLUME WILL BE LOST!
Are you sure you want to delete "Volume0"? (Y/N):
Deleting a volume will reset the disks to non-RAID.
WARNING: ALL DISK DATA WILL BE DELETED.
[↑↓]Select [ESC]-Previous Menu [DEL]-Delete Volume

Pressing <Y> deletes all the data in the HDDs.

Resetting disks to Non-RAID

An HDD that has been previously configured as part of another RAID set in another platform is called a broken RAID HDD. When you install a broken RAID HDD, you cannot select this disk when configuring a RAID set through the Intel® Matrix Storage Manager option. If you still want to use this broken RAID HDD as part of the RAID set configured through the Intel® Matrix Storage Manager, you may do so by resetting the disk to Non-RAID. You will, however, lose all data and previous RAID configurations.

To reset disks to Non-RAID:

1. In the main Intel® Matrix Storage Manager RAID BIOS menu, highlight *Reset Disks to Non-RAID* using the up/down arrow key then press <Enter>.



2. Use the space bar to select the HDD to reset to Non-RAID.
3. A dialogue box appears to confirm the action. Press <Y> to confirm; otherwise, press <N>.

Pressing <Y> deletes all the data in the HDDs.

Exiting Setup

When you have finished, highlight *Exit* using the up/down arrow key then press <Enter> to exit the Intel® Matrix Storage Manager RAID BIOS utility.

A dialogue box appears to confirm the action. Press <Y> to confirm; otherwise, press <N> to return to the Intel® Matrix Storage Manager RAID BIOS menu.

Chapter 6

Trouble Shooting

Start up problems during assembly

After assembling the PC for the first time you may experience some start up problems. Before calling for technical support or returning for warranty, this chapter may help to address some of the common questions using some basic troubleshooting tips. You may also log onto our ECS website for more information: *http:// www.ecs.com.tw/ECSWebSite/Support/Support_FAQ.aspx?MenuID=49&childid=M 49&LanID=0*

a) System does not power up and the fans are not running.

1. Disassemble the PC to remove the VGA adaptor card, DDR memory, LAN, USB and other peripherals including keyboard and mouse. Leave only the motherboard, CPU with CPU cooler and power supply connected. Make sure the power cord is plugged into the wall socket & the switch on the Power Supply Unit (PSU) is turned " on " as well. Turn on again to see if the CPU and power supply fans are running.

2. Make sure to remove any unused screws or other metal objects such as screwdrivers from the inside PC case. This is to prevent damage from short circuit.

3. Check the CPU FAN connector is connected to the motherboard.

4. For Intel platforms check the pins on the CPU socket for damage or bent. A bent pin may cause failure to boot and sometimes permanent damage from short circuit.

5. Check the 12V power connector is connected to the motherboard.

6. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.

b) Power is on, fans are running but there is no display

1. Make sure the monitor is turned on and the monitor cable is properly connected to the PC.

2. Check the VGA adapter card (if applicable) is inserted properly.

3. Listen for beep sounds. If you are using internal PC speaker make sure it is connected.
   a. continuous 3 short beeps: memory not detected
   b. 1 long beep and 8 short beeps: VGA not detected

c) The PC suddenly shuts down while booting up.

1. The CPU may experience overheating so it will shutdown to protect itself. Apply the thermal grease onto the CPU heatsink & ensure the CPU fan is well-connected with the CPU heatsink. Check if the CPU fan is working properly while the system is running.

2. From the BIOS setting, try to disable the Smartfan function to let the fan run at default speed. Doing a Load Optimised Default will also disable the Smartfan.

Start up problems after prolong use

After a prolong period of use your PC may experience start up problems again. This may be caused by breakdown of devices connected to the motherboard such as HDD, CPU fan, etc. The following tips may help to revive the PC or identify the cause of failure.

1. Clear the CMOS values using the CLR_CMOS jumper. Refer to CLR_CMOS jumper in Chapter 2 for Checking Jumper Settings in this user manual. When completed, follow up with a Load Optimised Default in the BIOS setup.

2. Check the CPU cooler fan for dust. Long term accumulation of dust will reduce its effectiveness to cool the processor. Clean the cooler or replace a new one if necessary.

3. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.

4. Remove the hard drive, optical drive or DDR memory to determine which of these components may be at fault.

5. Check whether there is any bulked up electrolytic capacitor or abnormal component.

Please logo onto our ECS website: http://www.ecs.com.tw/ECSWebSite/Support/Technical_Support_List.aspx?MenuID=50&LanID=0 for more information.

Maintenance and care tips

Your computer, like any electrical appliance, requires proper care and maintenance. Here are some basic PC care tips to help prolong the life of the motherboard and keep it running as best as it can.

1. Keep your computer in a well ventilated area. Leave some space between the PC and the wall for sufficient airflow.

2. Keep your computer in a cool dry place. Avoid dusty areas, direct sunlight and areas of high moisture content.

3. Routinely clean the CPU cooler fan to remove dust and hair.

4. In places of hot and humid weather you should turn on your computer once every other week to circulate the air and prevent damage from humidity.

5. Add more memory to your computer if possible. This not only speeds up the system but also reduces the loading of your hard drive to prolong its life span.

6. If possible, ensure the power cord has an earth ground pin directly from the wall outlet. This will reduce voltage fluctuation that may damage sensitive devices.

Basic Troubleshooting Flowchart

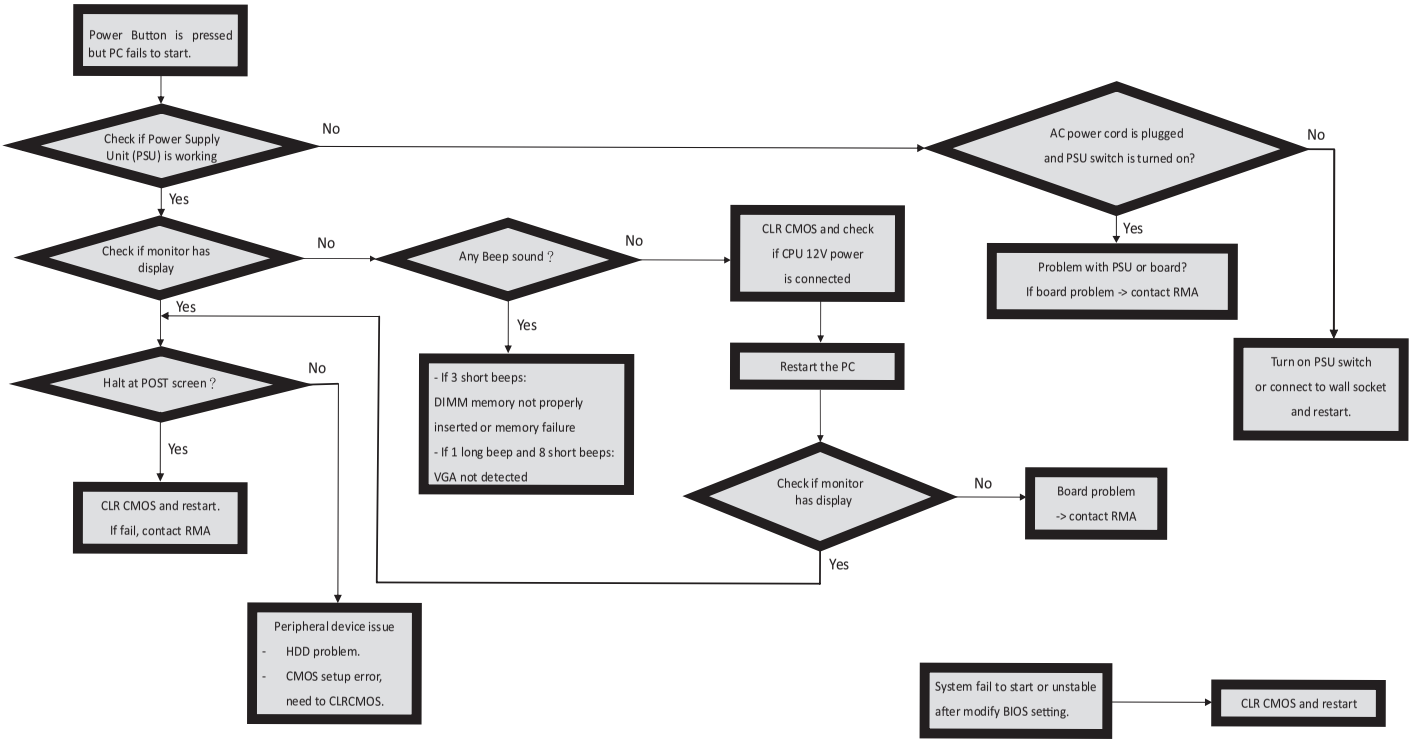
Power Button is pressed but PC fails to start.
Check if Power Supply Unit (PSU) is working
No
Yes
AC power cord is plugged and PSU switch is turned on?
No
Yes
Problem with PSU or board? If board problem -> contact RMA
Turn on PSU switch or connect to wall socket and restart.
Check if monitor has display
No
Yes
Any Beep sound ?
No
Yes
- If 3 short beeps: DIMM memory not properly inserted or memory failure
- If 1 long beep and 8 short beeps: VGA not detected
CLR CMOS and check if CPU 12V power is connected
Restart the PC
Check if monitor has display
No
Yes
Board problem -> contact RMA
Halt at POST screen ?
No
Yes
CLR CMOS and restart. If fail, contact RMA
Peripheral device issue
- HDD problem.
- CMOS setup error, need to CLRCMOS.
System fail to start or unstable after modify BIOS setting.
CLR CMOS and restart

Memo